

TITANUS 04

 


Narzędzia potrzebne do montażu




UWAGA !!!

MONTOWANIE USZKODZONYCH
ELEMENTÓW POWODUJE UTRATĘ
GWARANCJI

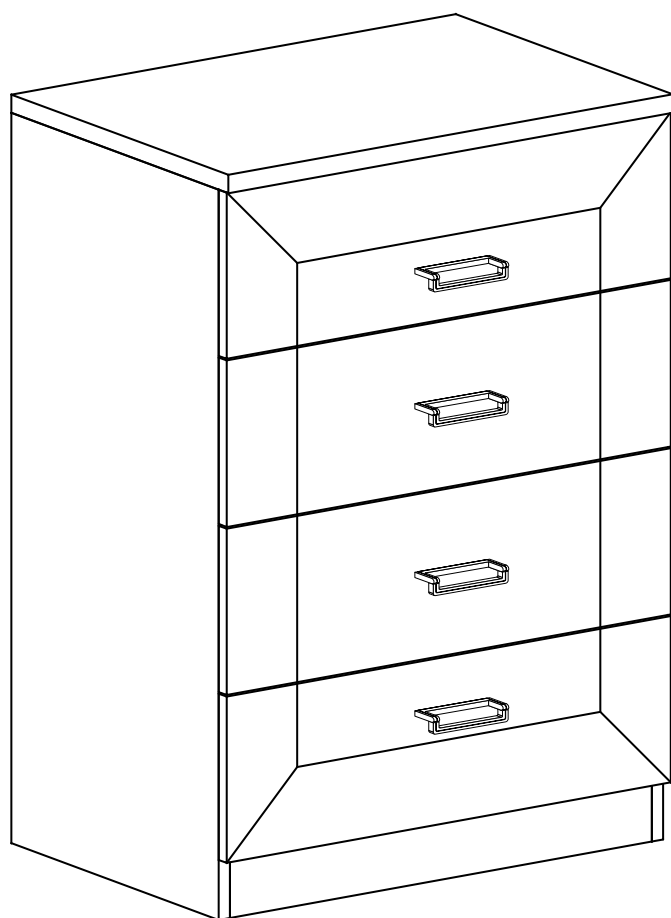


Nr	D[mm]	S[mm]	G[mm]	Ilość
1	635	440	32	1
2	585	405	16	1
3	865	405	16	1
4	865	405	16	1
5	585	80	16	1
6	612	808	2,5	1
7	527	150	16	4
8	405	150	16	4
9	405	150	16	4
10	603	190	16	4
11	555	405	2,5	4

 W przypadku reklamacji proszę podać numer pakowacza znajdujący się na kartonie.

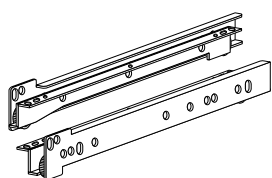

T - 4 Kpl.

 


Q - 2 St.
3,5x16 mm



X1 - 12 St.



 
X2 - 4 St.

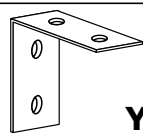

Y - 1 St.



 U - 4 St.




Q - 4 St.




F - 16 St.



 
E - 80 St.




M - 16 St.
4x25 mm

 

N - 8 St.
4x22 mm

 


L - 12 St.

 


R - 4 St.



 
B - 28 St.



K - 12 St.

 


Z - 1 St.

 


J - 16 St.
5x13 mm








 
I

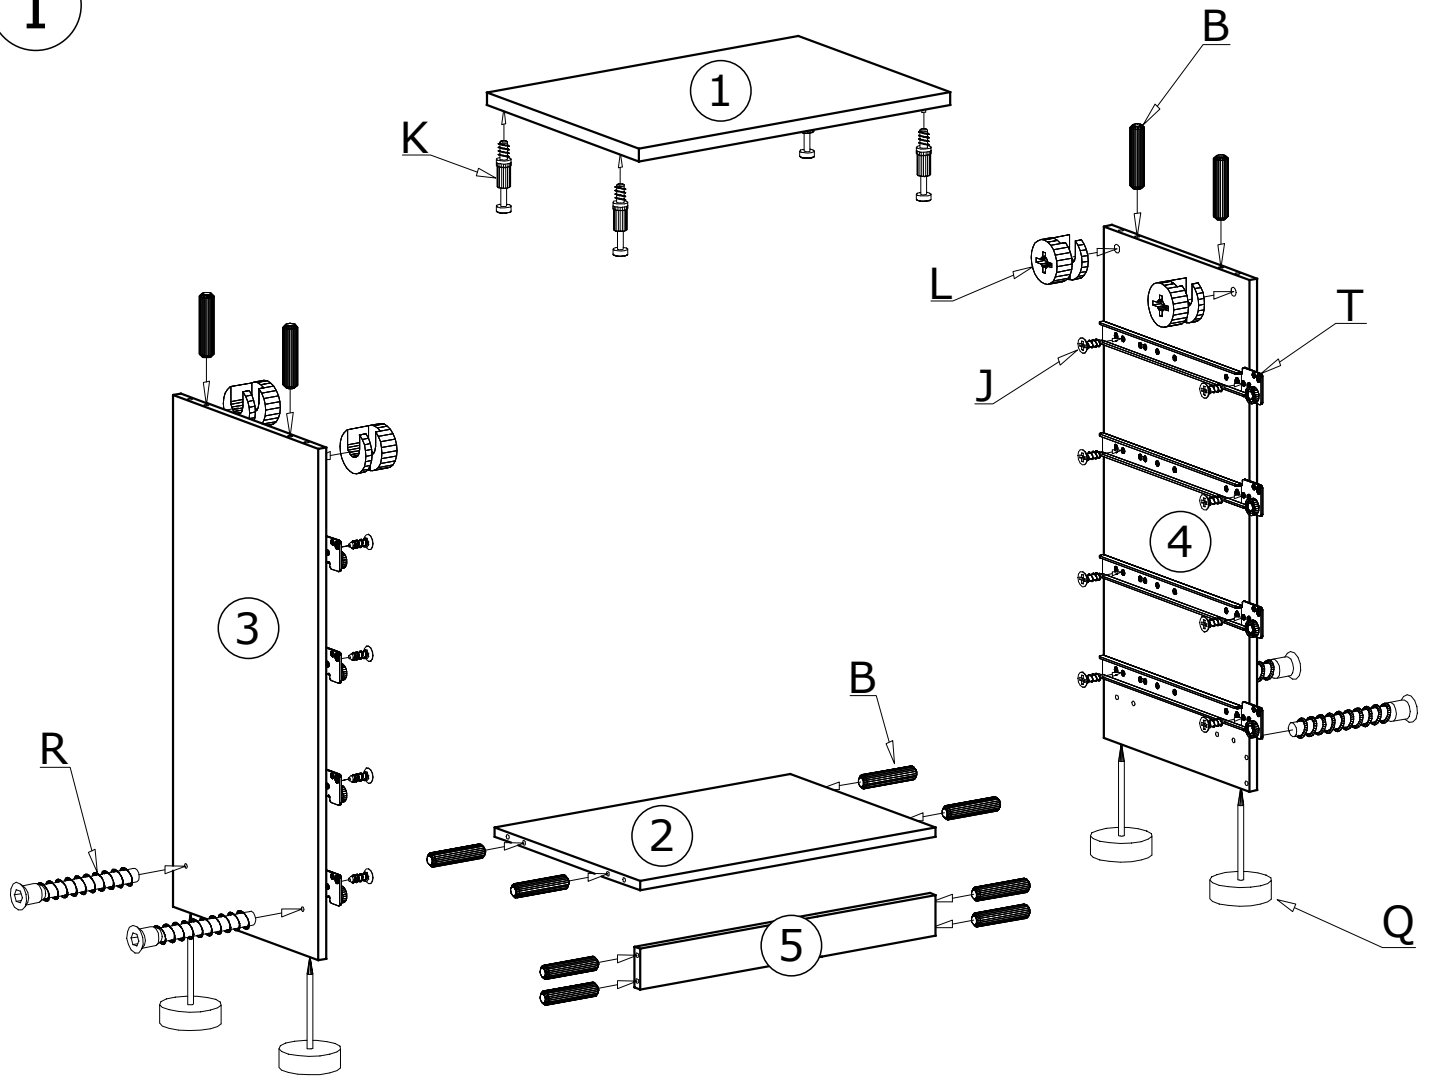

II

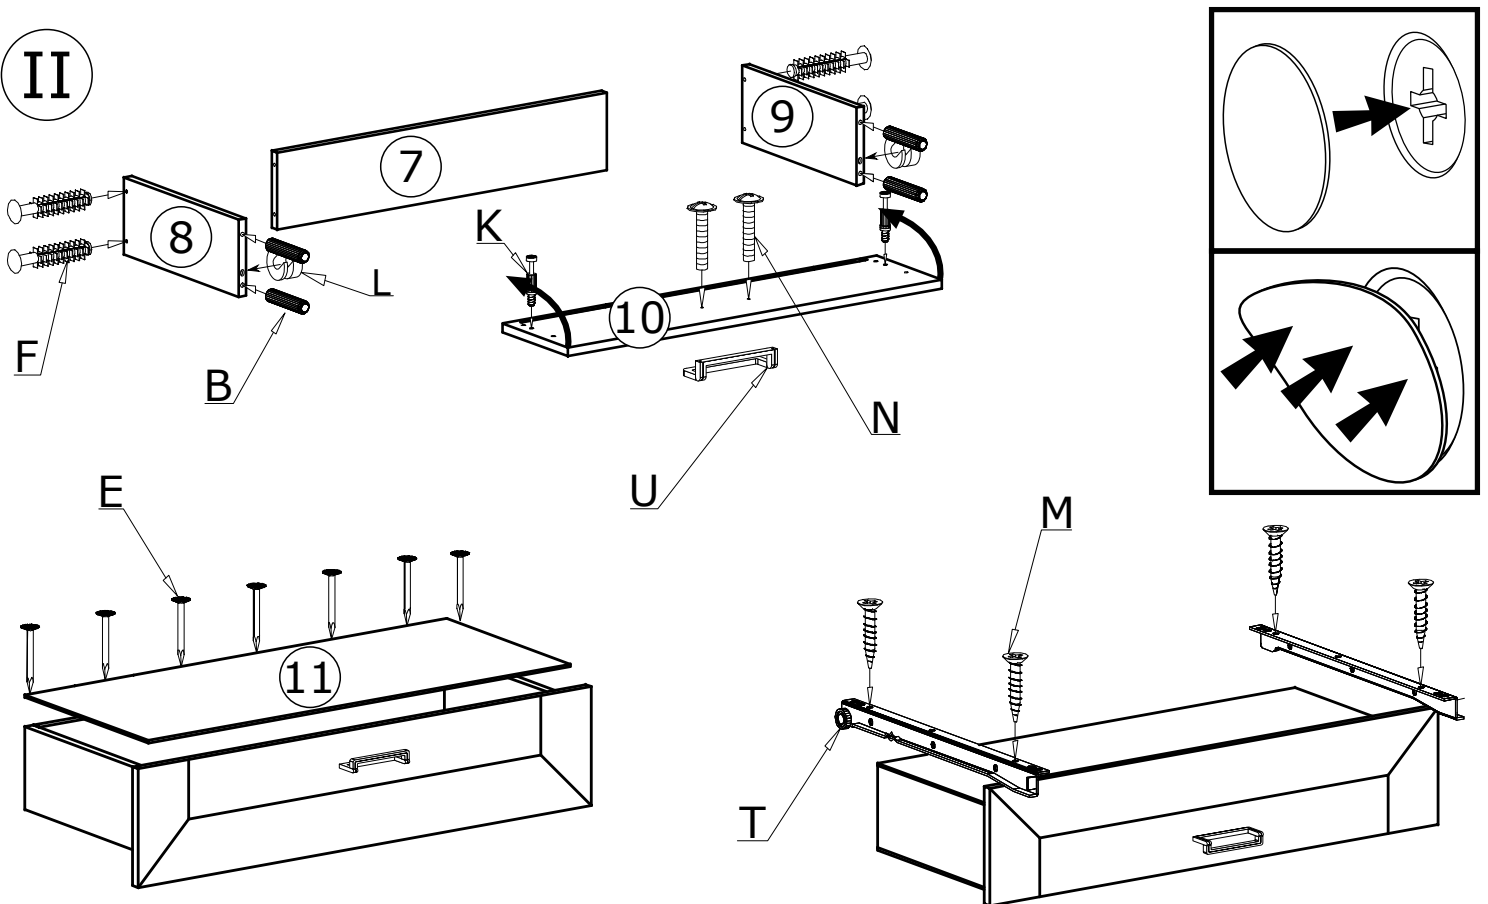 

III

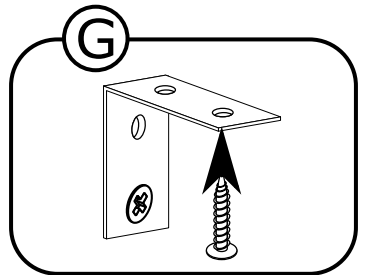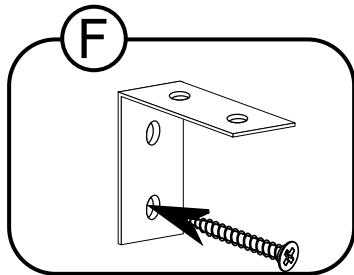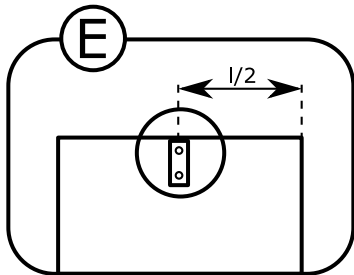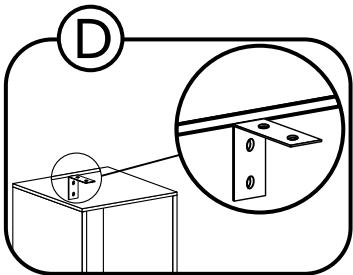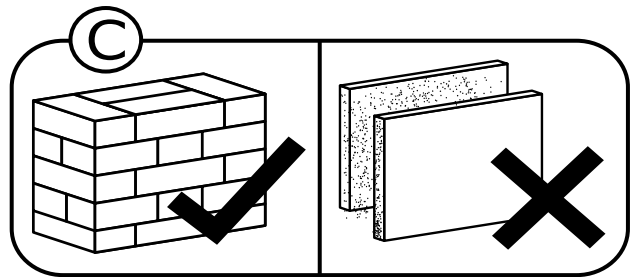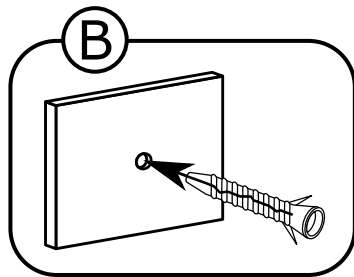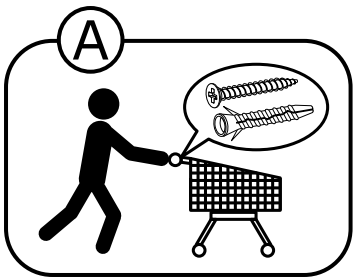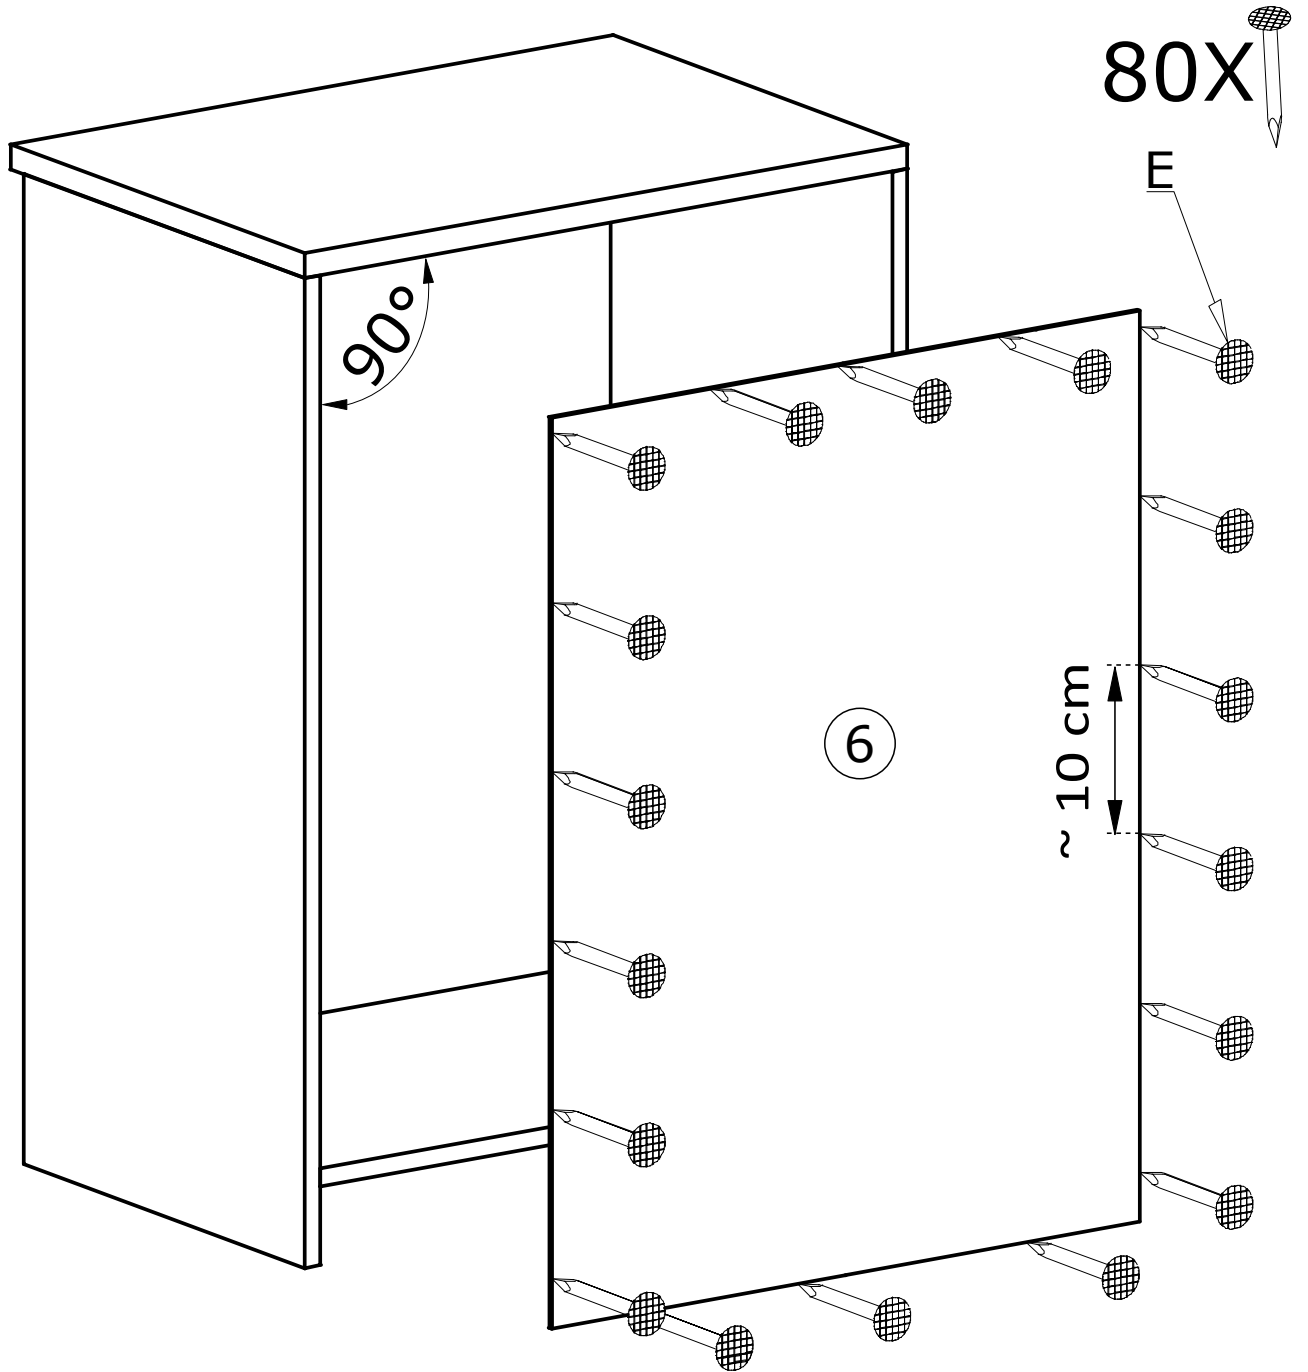        

IV

