 
 
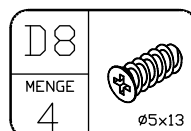 
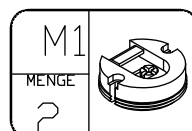 
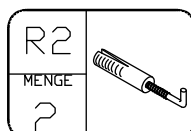 
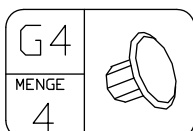 
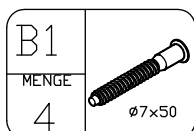 
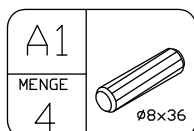 
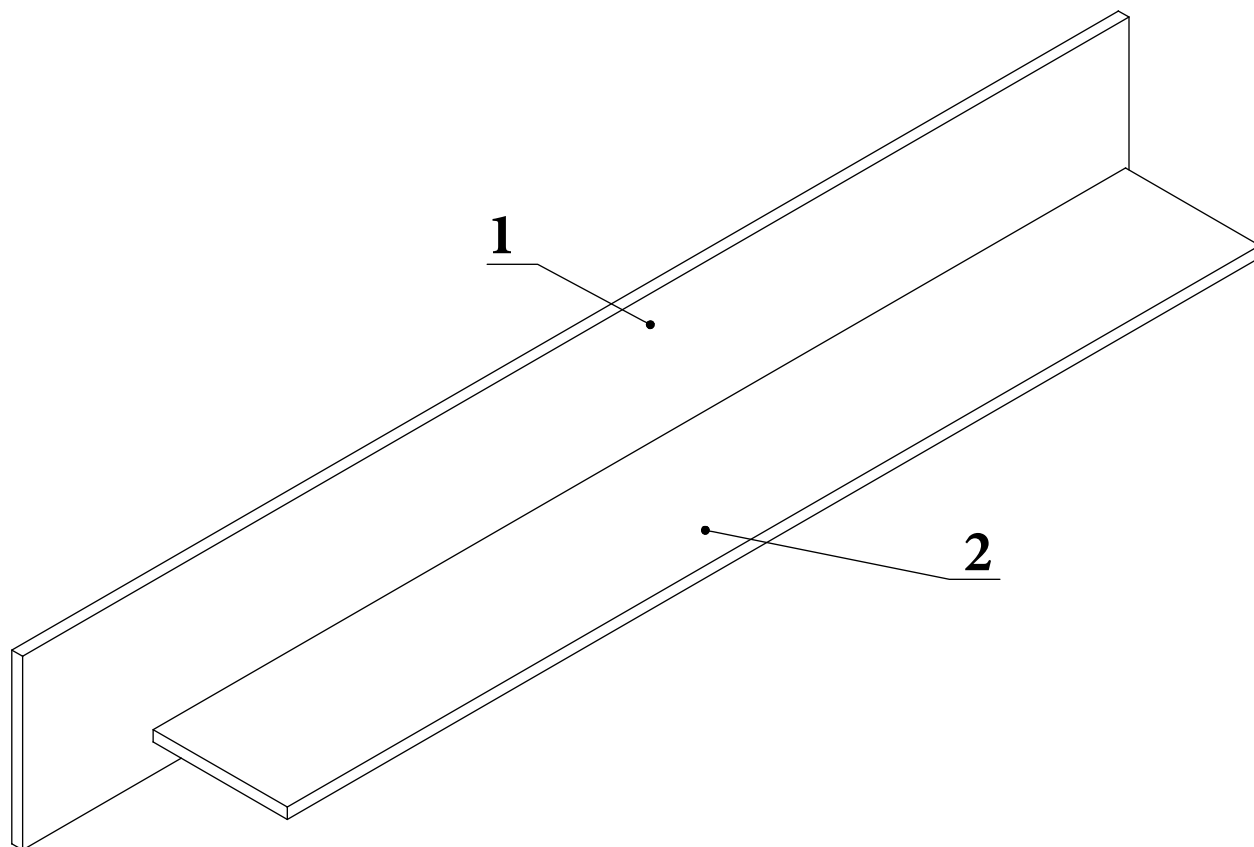 
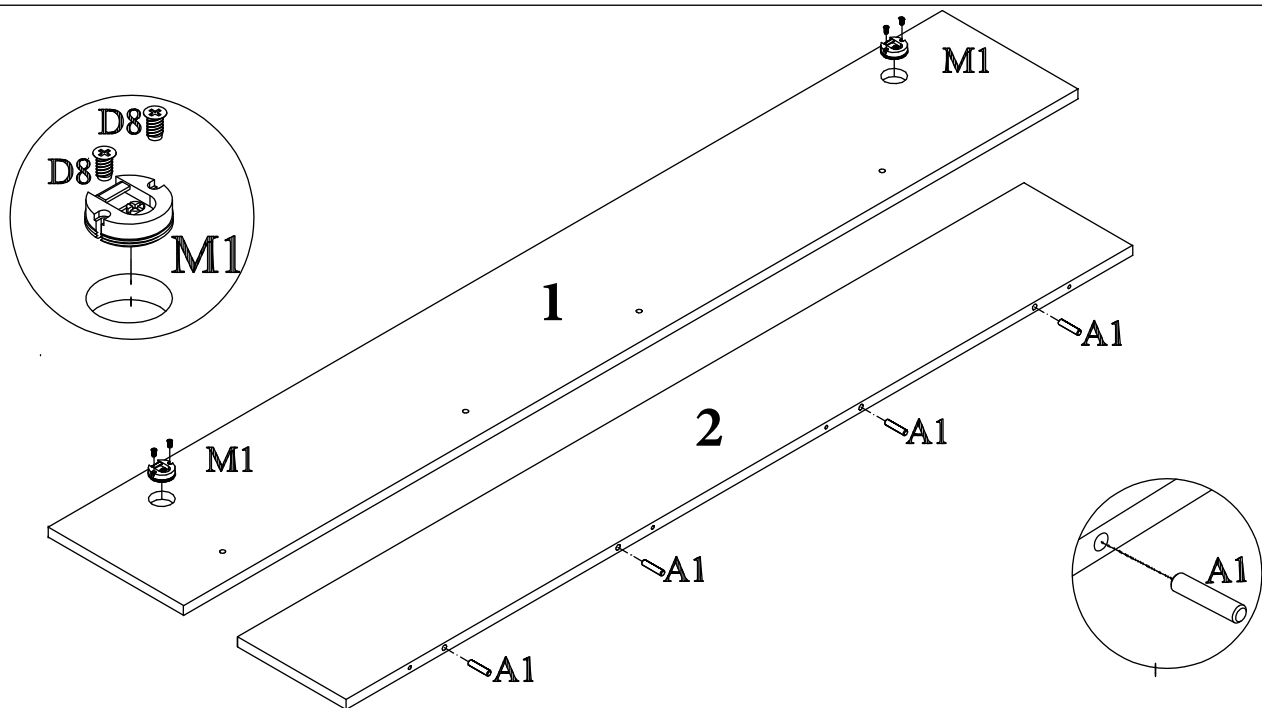 


montážny návod SARAH

SARAH

TYP
G

 
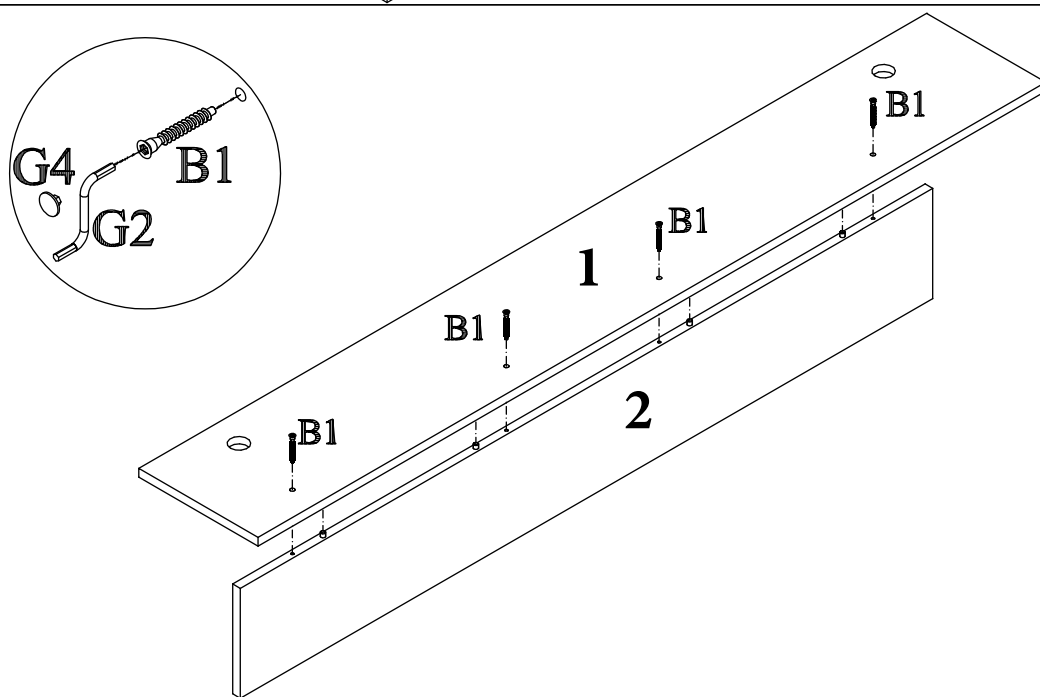 


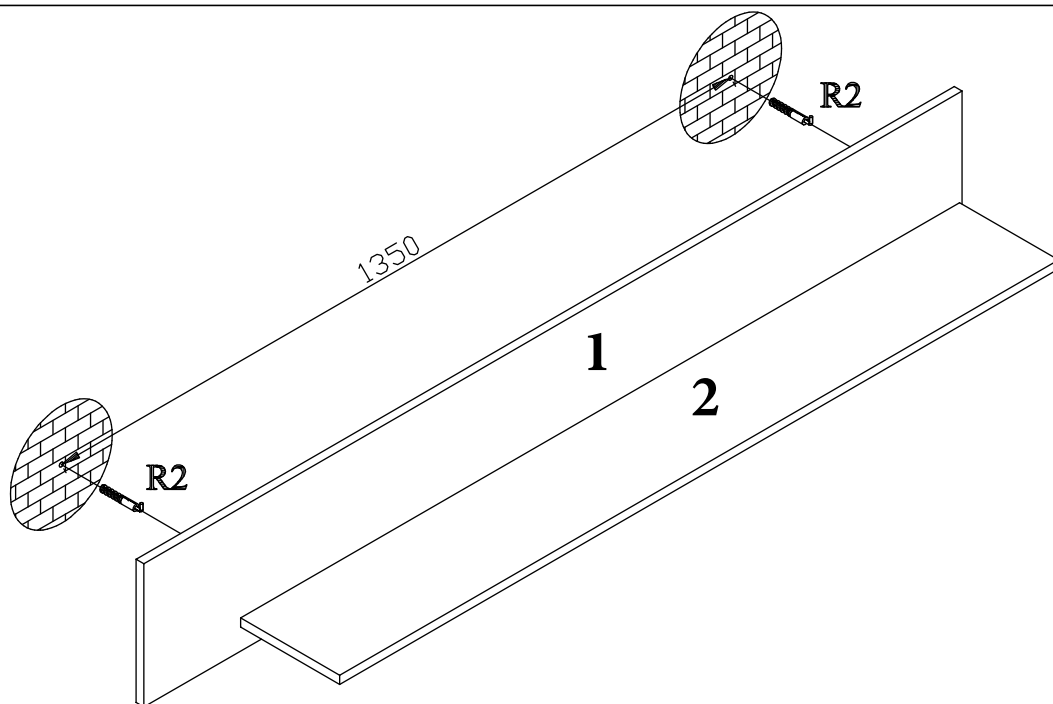 






 


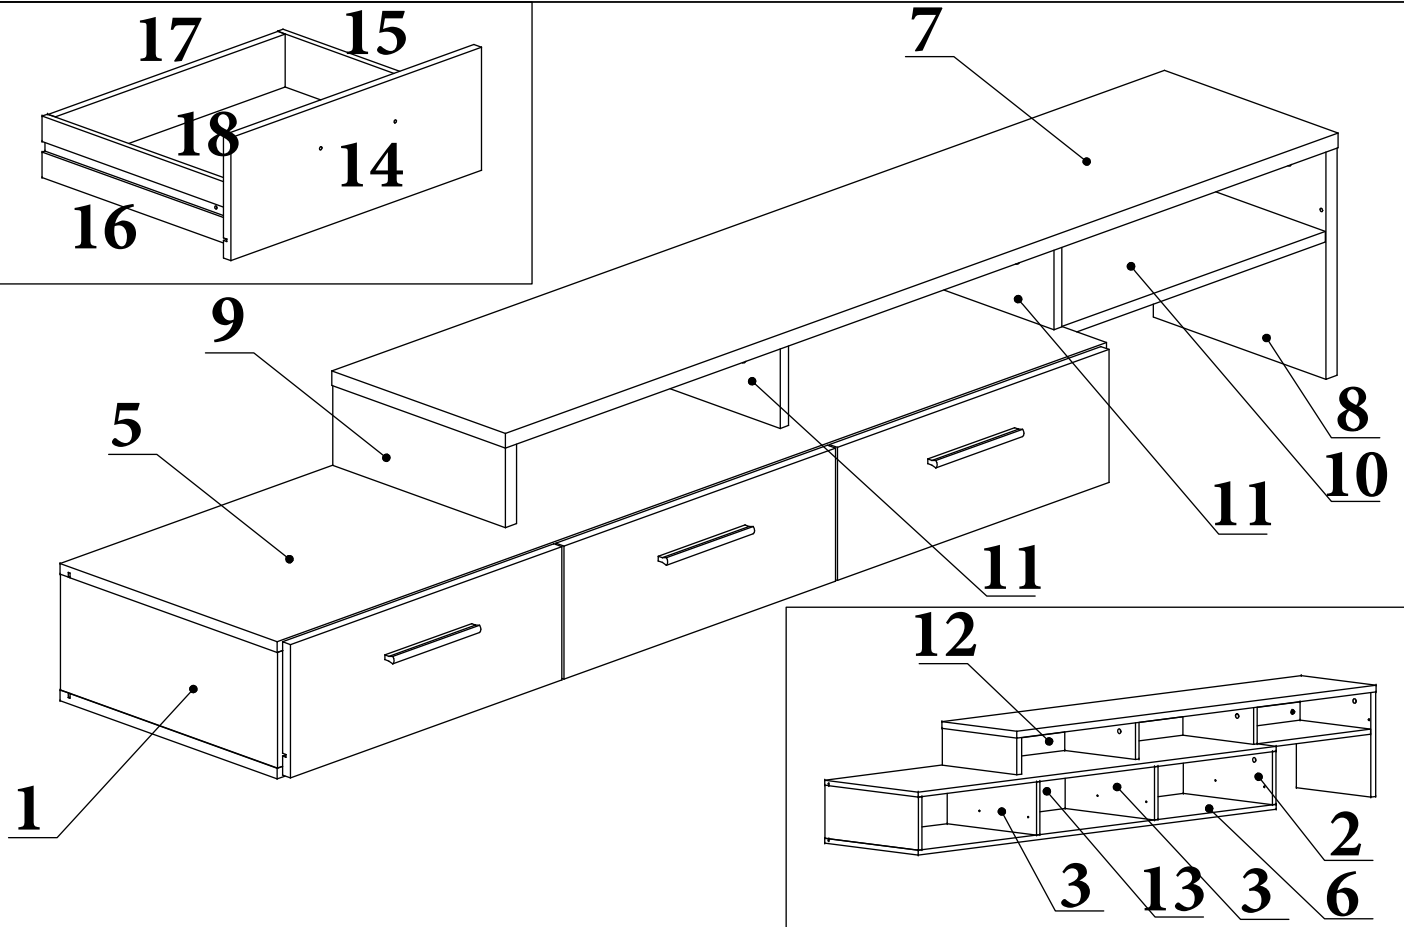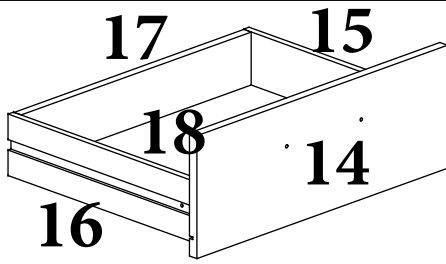









I**II****III**












 
montážny návod SARAH

SARAH





TYP
B+C





A1 MENGE 52  ø8x36	B11 MENGE 11  ø7x50	G4 MENGE 11 	B4 MENGE 20  ø5x13	B5 MENGE 16  ø15x12	B6 MENGE 4  ø15x15	G5 MENGE 12 
KL1 MENGE 3  L-160	P6 MENGE 6  UP4X30	S1 MENGE 8 	T6 MENGE 6 	Z2 MENGE 4  ø5	Z3 MENGE 4  ø8	H6 MENGE 3Kpl. 400 mm. 
G2 MENGE 1 	B3 MENGE 20  ø1,4x25	I2 MENGE 2 	D10 MENGE 12  øES6x8	G1 MENGE 1 	D18 MENGE 6  M4x9	

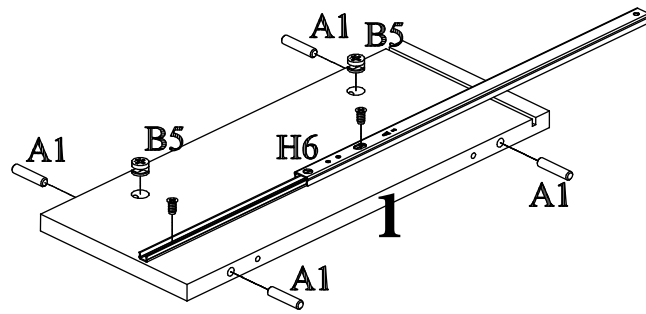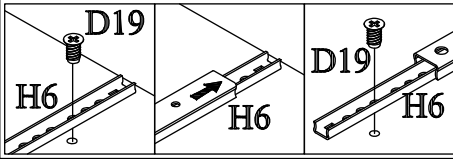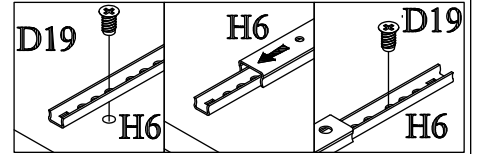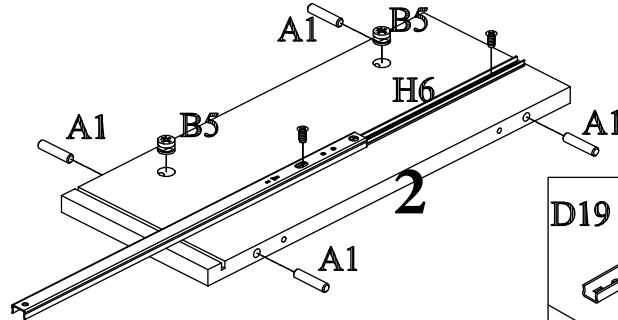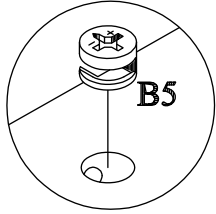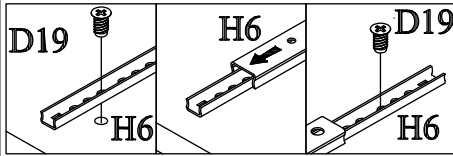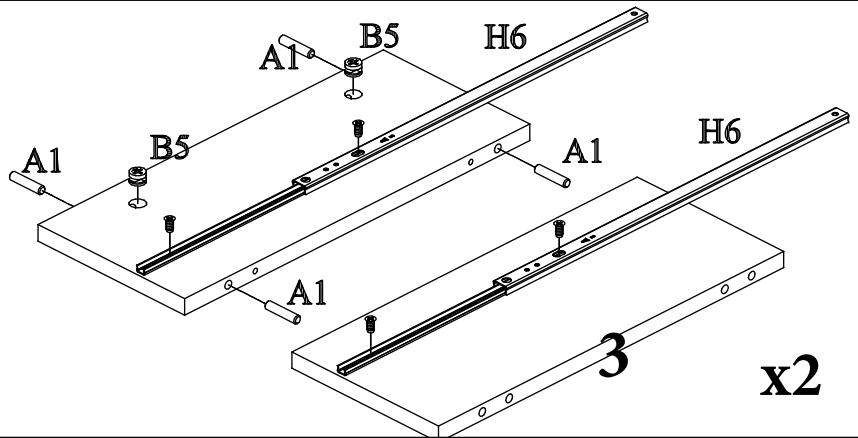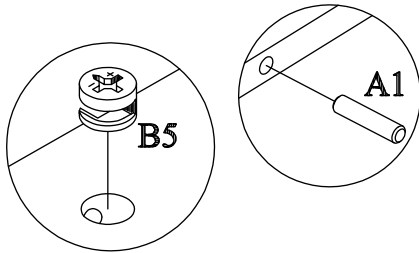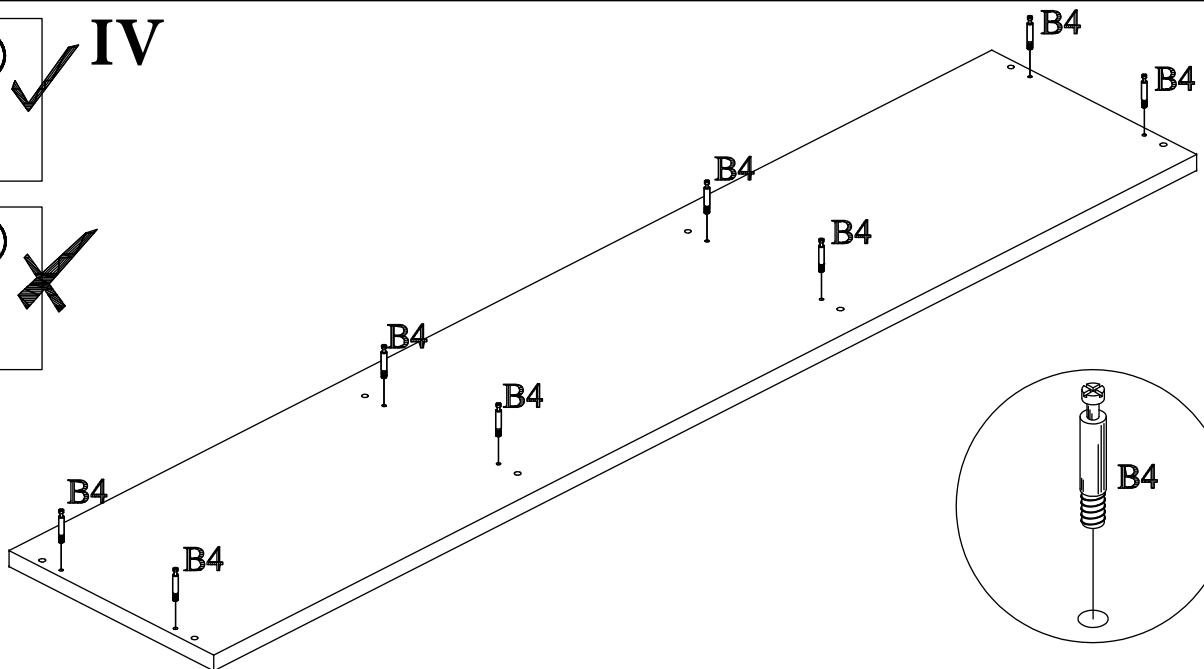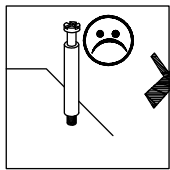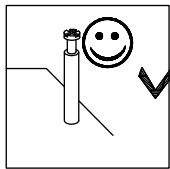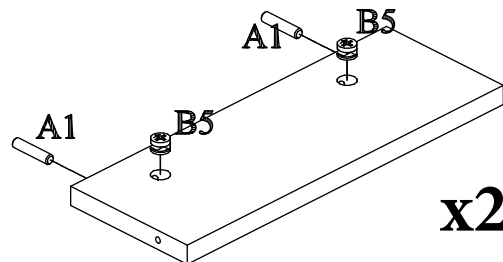            I**II****III****IV****V**

   
 
VI

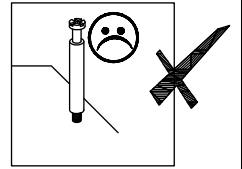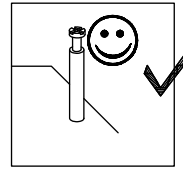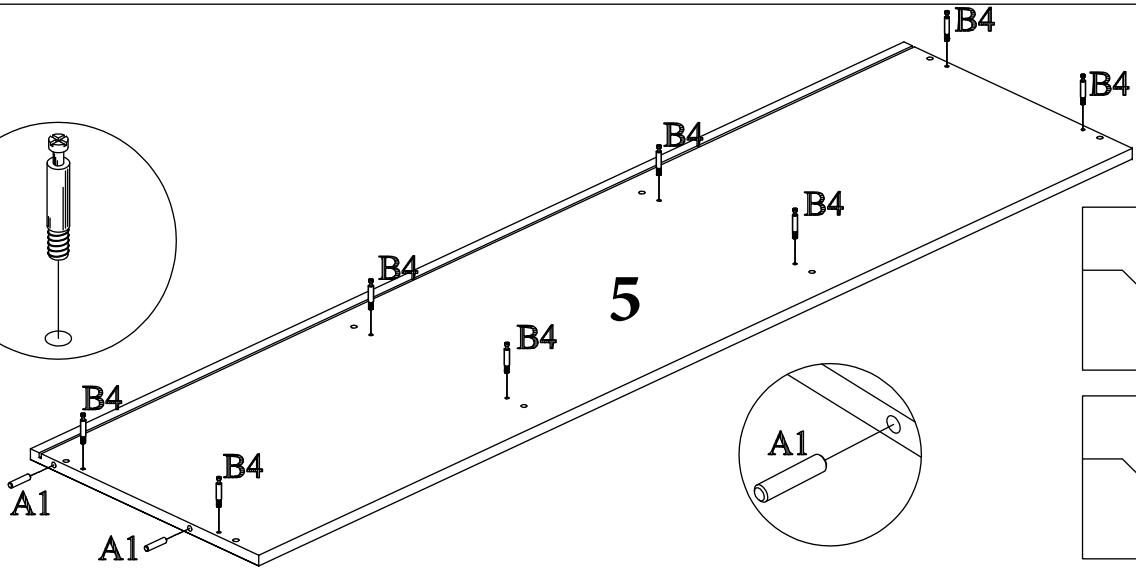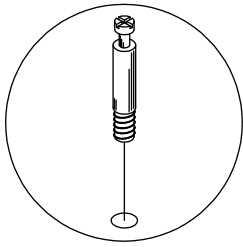


VII

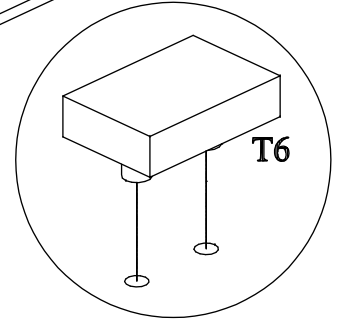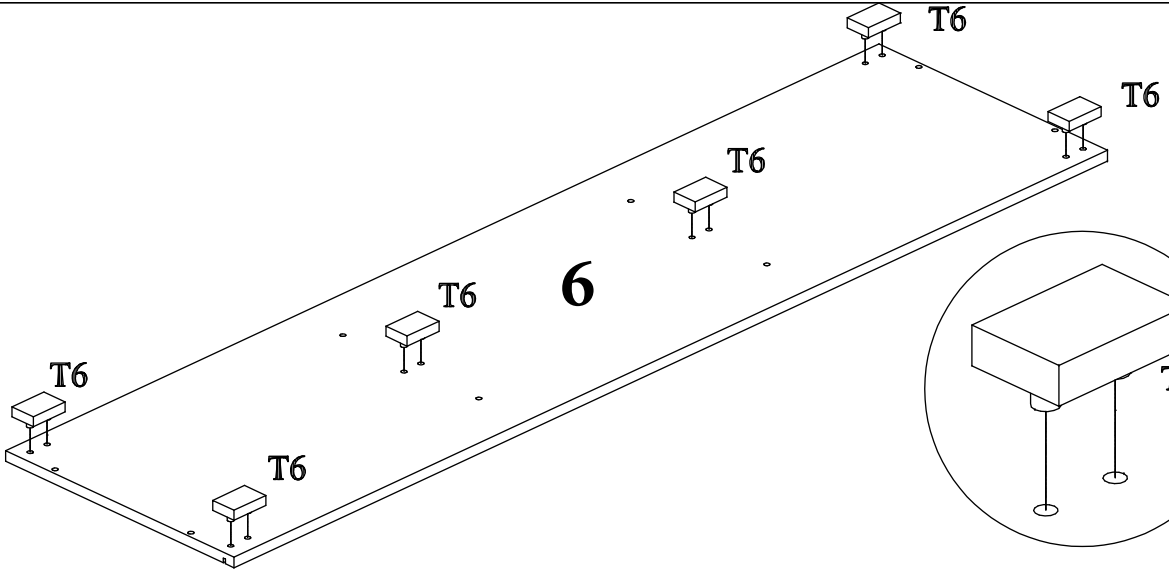  


VIII

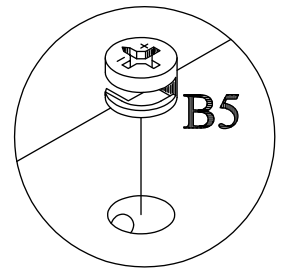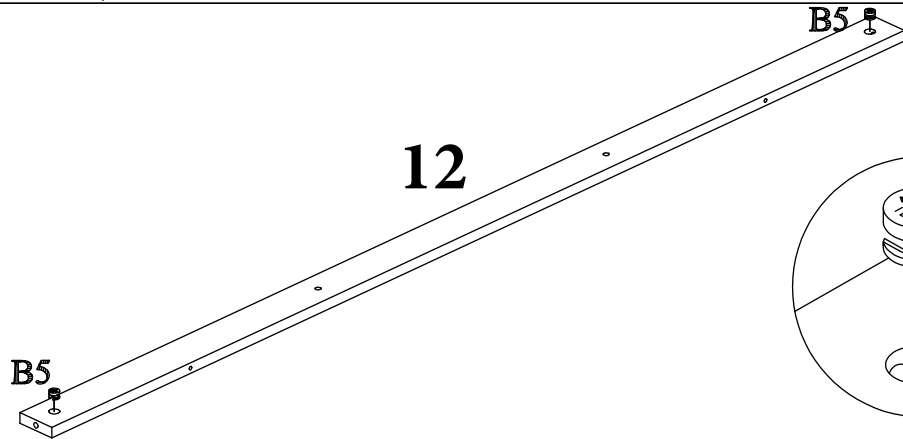  


IX

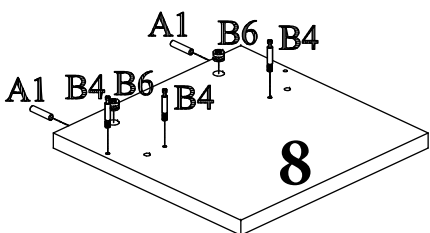 

X

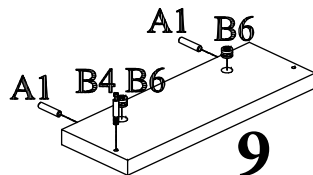 


XI

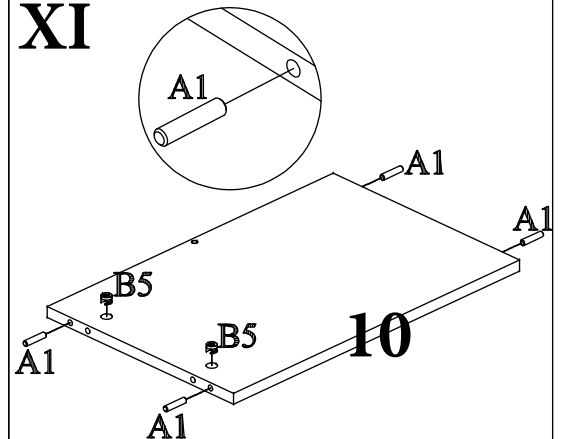 


XII

 x3

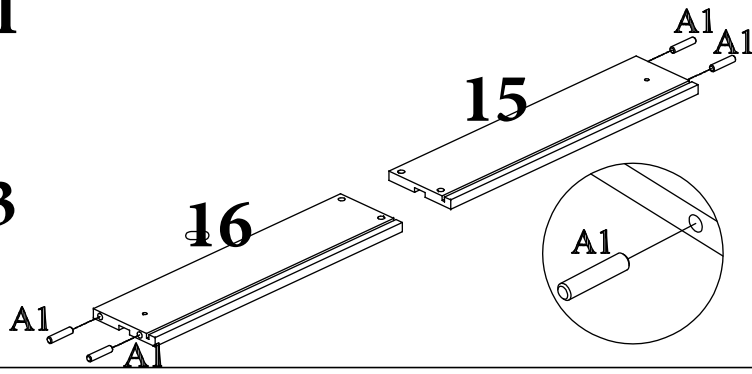


XIII

 x3

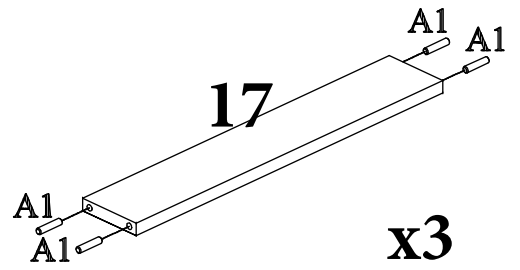


XIV

 x3


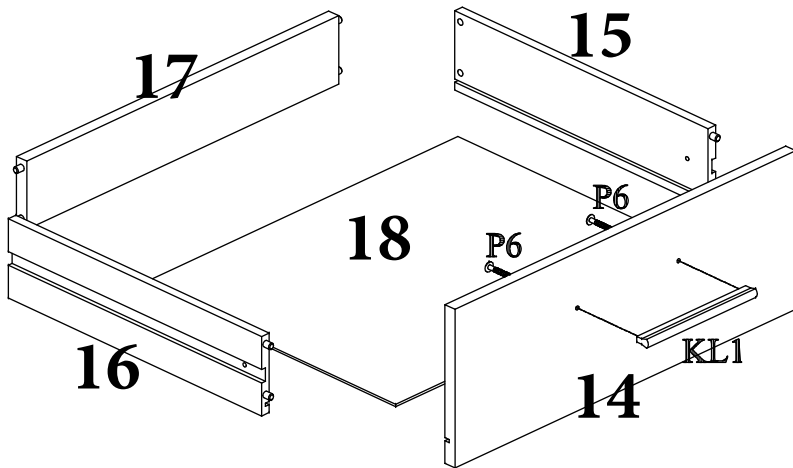


XV

 
x3

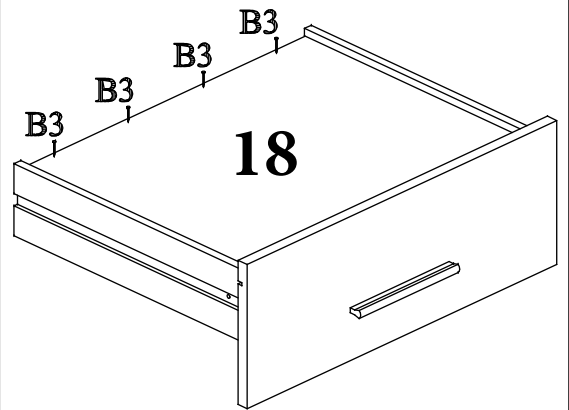


XVI

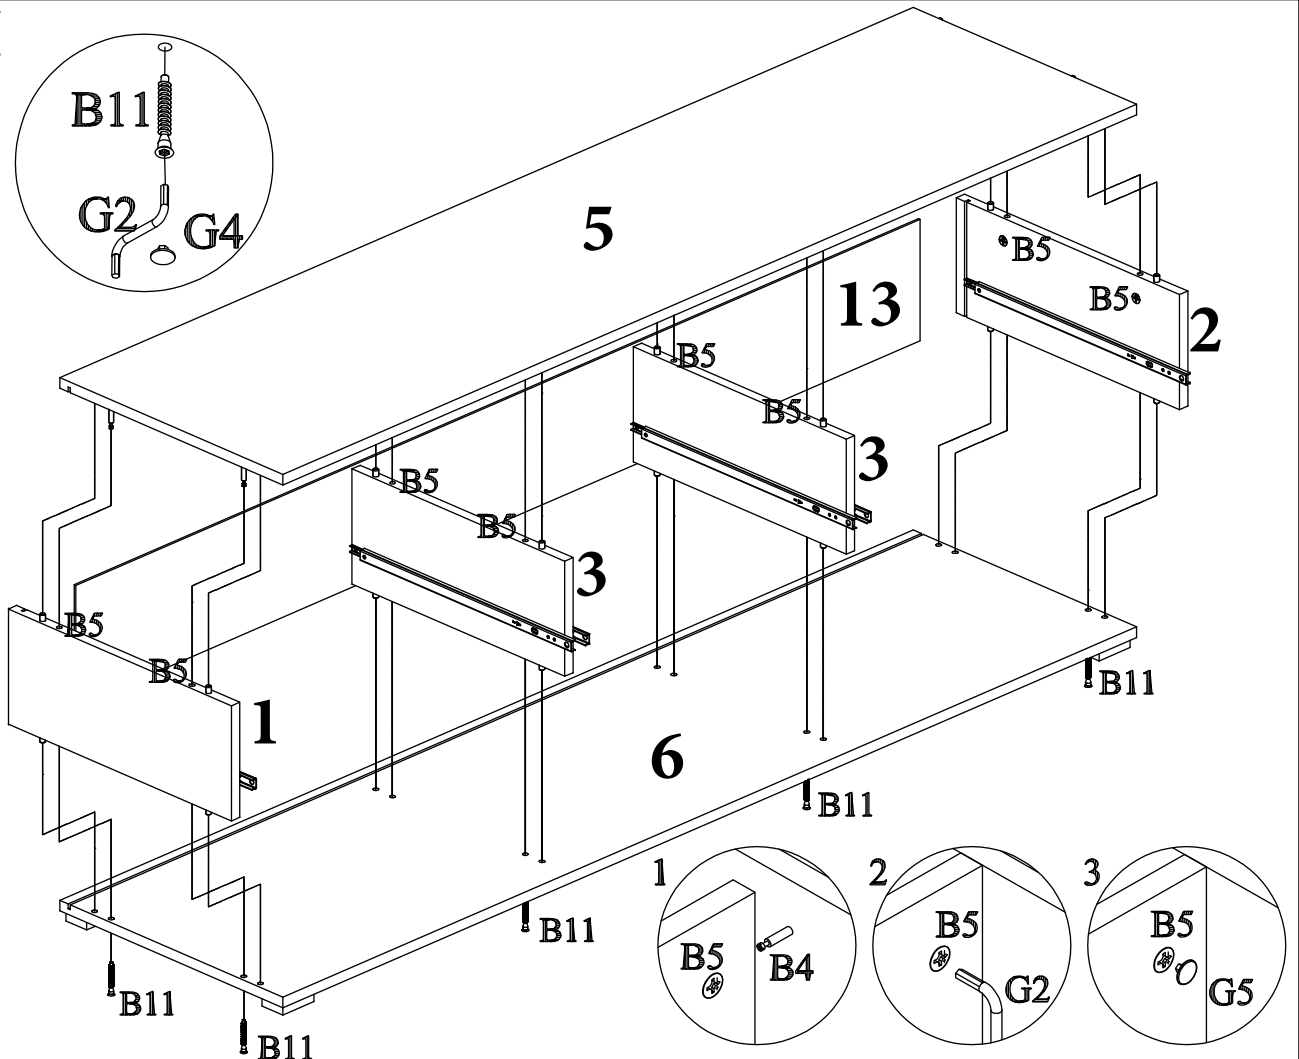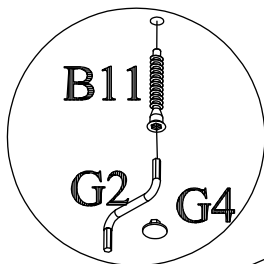  


XVII

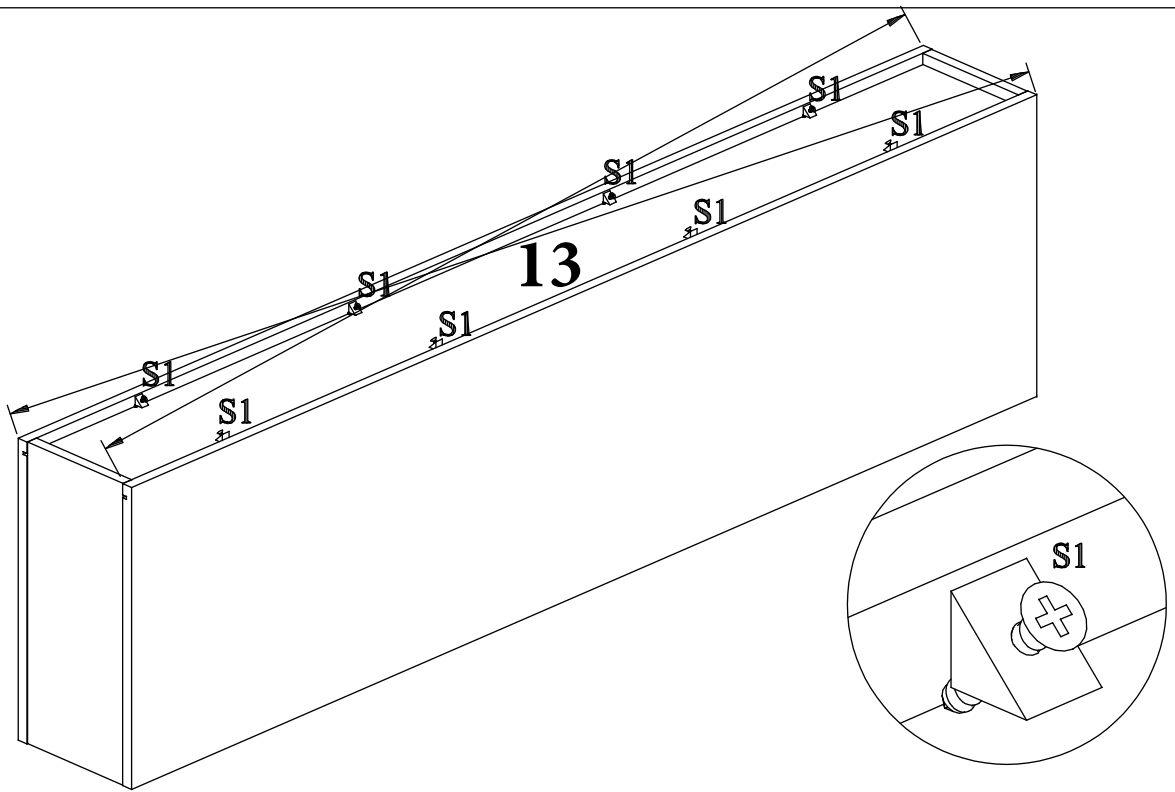 


XVIII

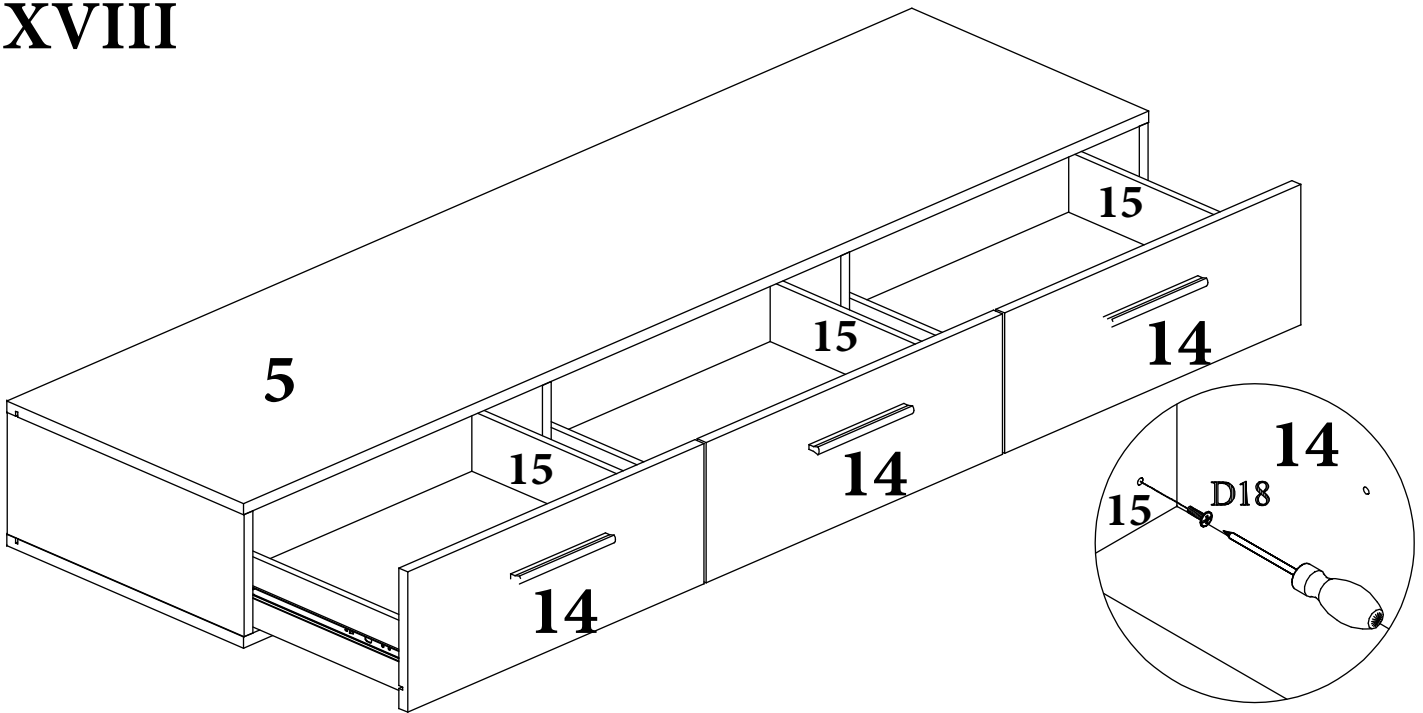 


XIX

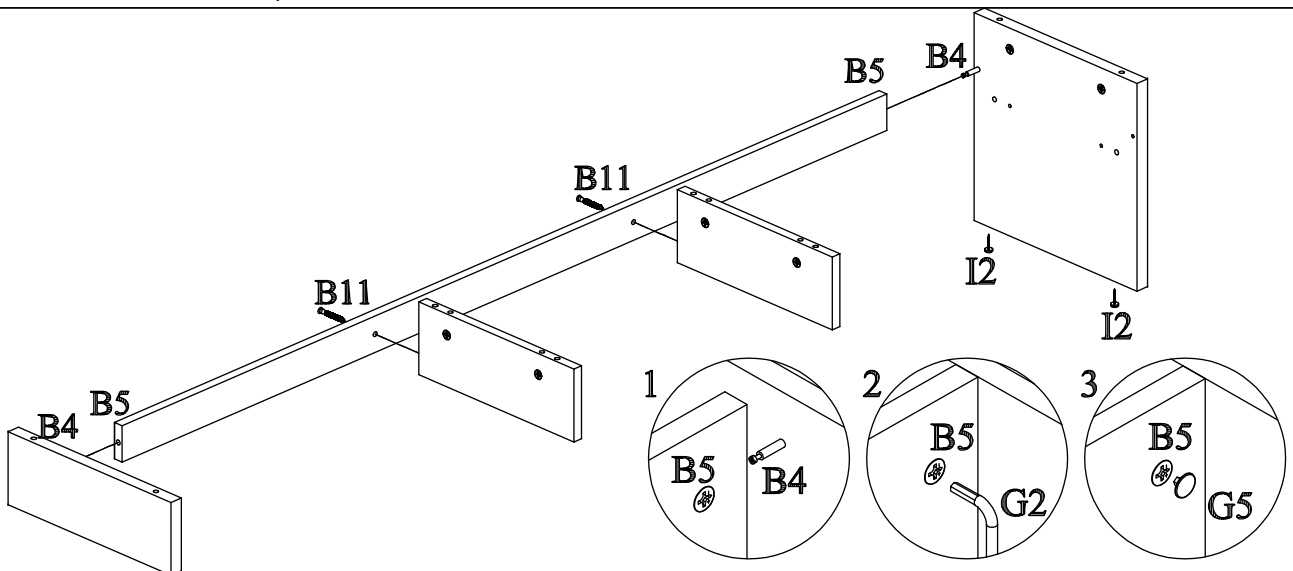 

XX

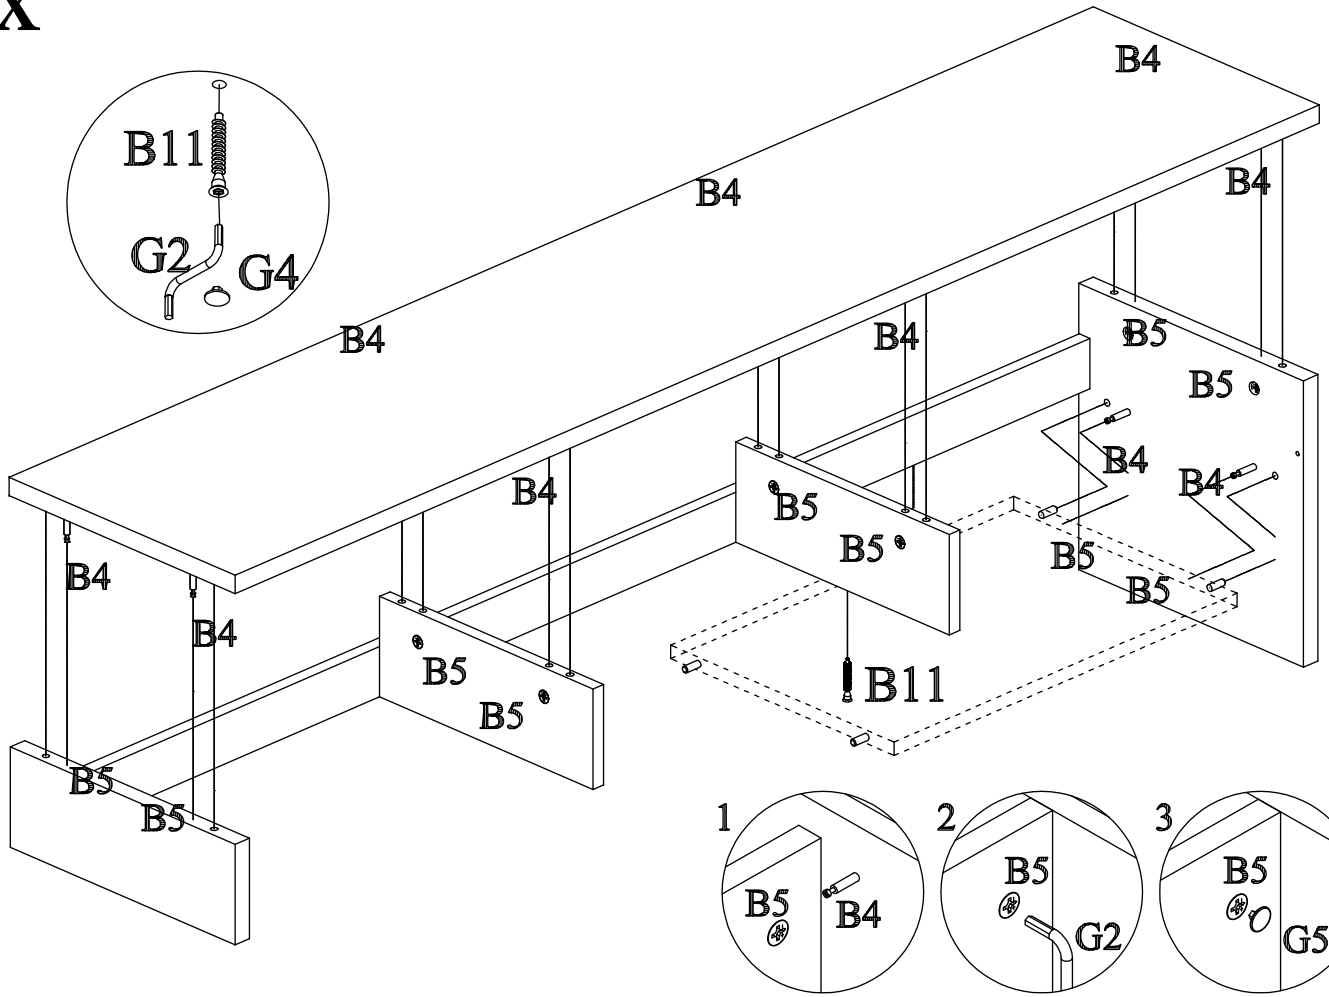 


XXI

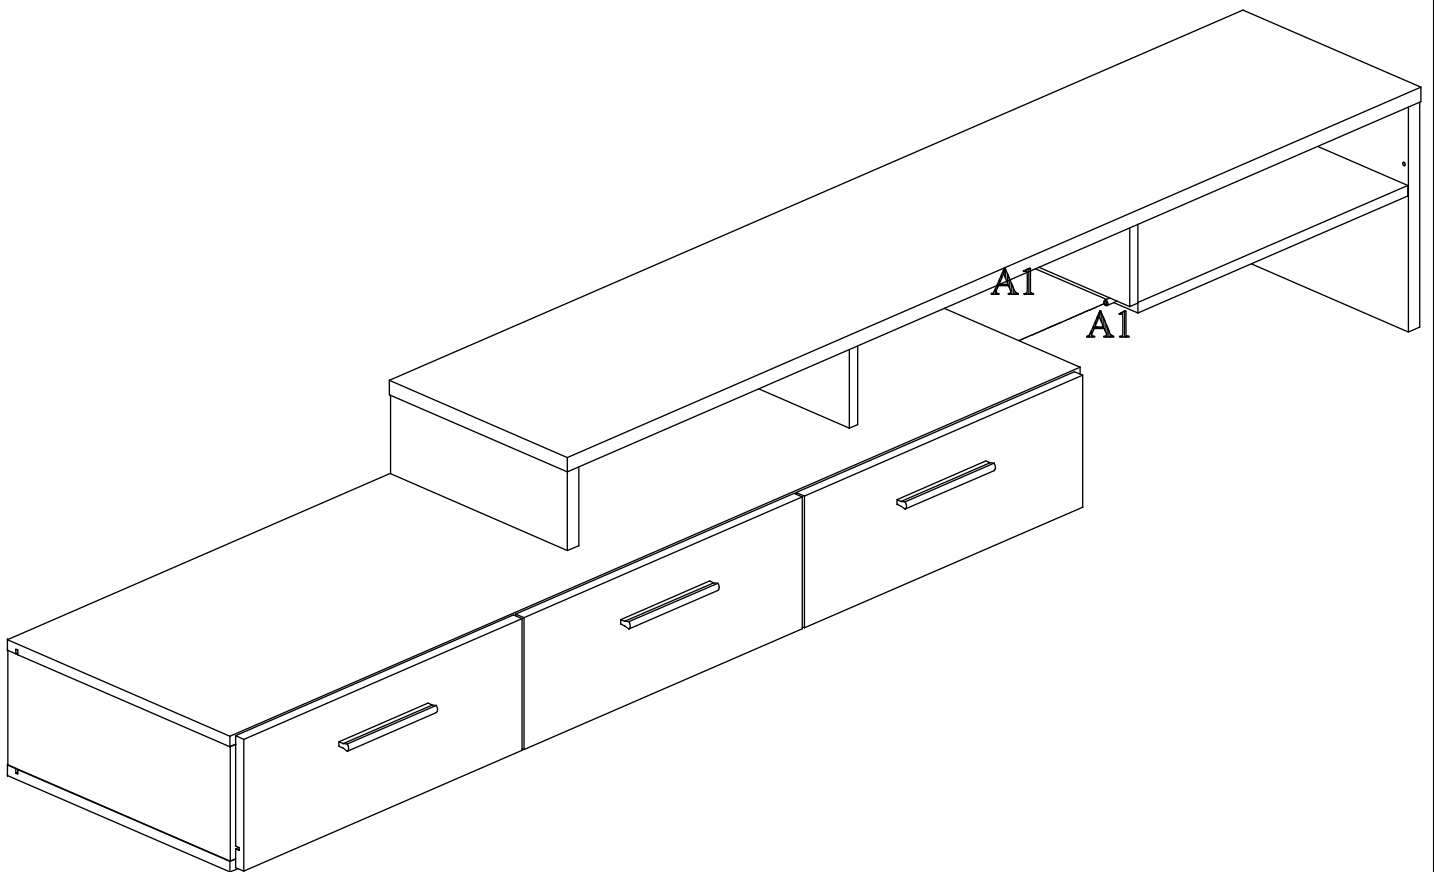 


   
 
 

 

 

 

 



 





montážny návod SARAH

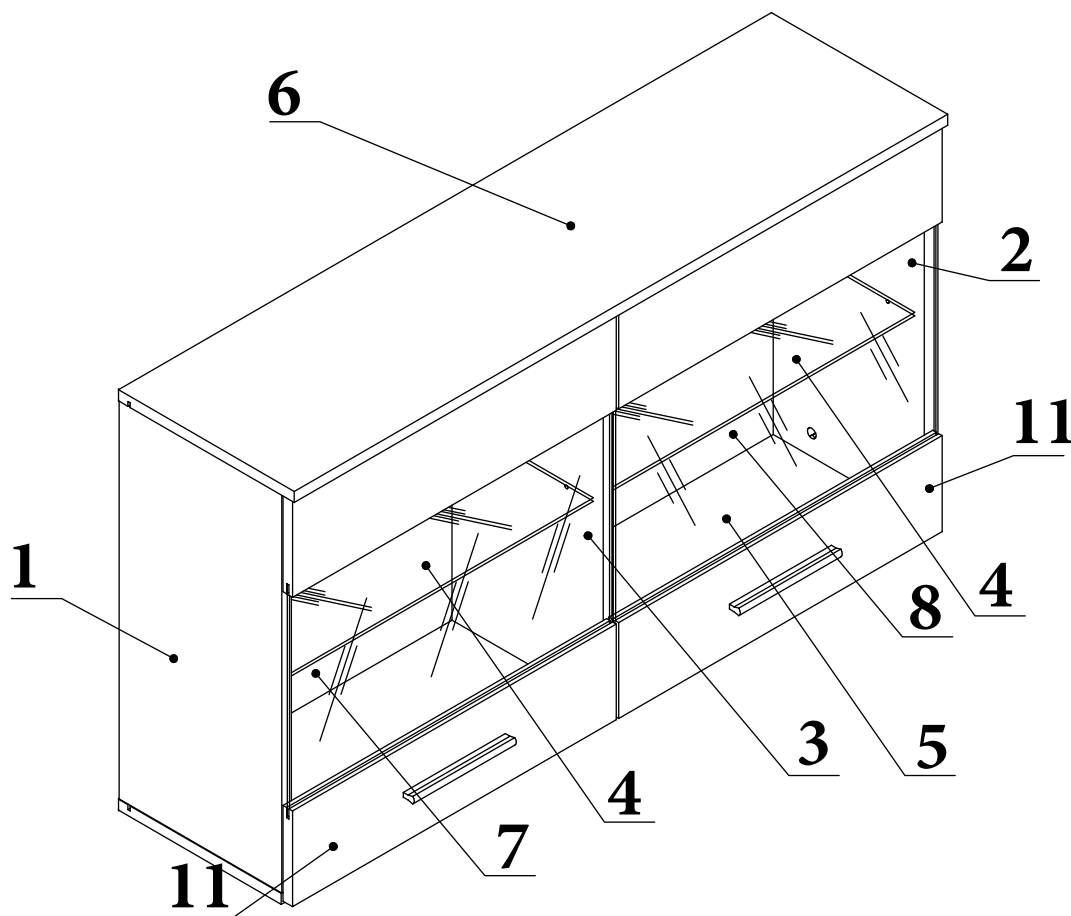SARAH





TYP
D






A1 MENGE 12  Ø8x36	B4 MENGE 12  Ø5x13	B5 MENGE 12  Ø15x12	G5 MENGE 12 	G20 MENGE 8 	E1 MENGE 4 	E2 MENGE 4 	
L1 MENGE 2 L-160 	P6 MENGE 4 UP4X30 	G1 MENGE 5 	D9 MENGE 5 Ø3x20 	R1 MENGE 3 	R2 MENGE 3 	S1 MENGE 12 	
D6 MENGE 6 Ø3,5x30 	D1 MENGE 8 ØUS3,5X13 	G2 MENGE 1 	Z2 MENGE 8 				

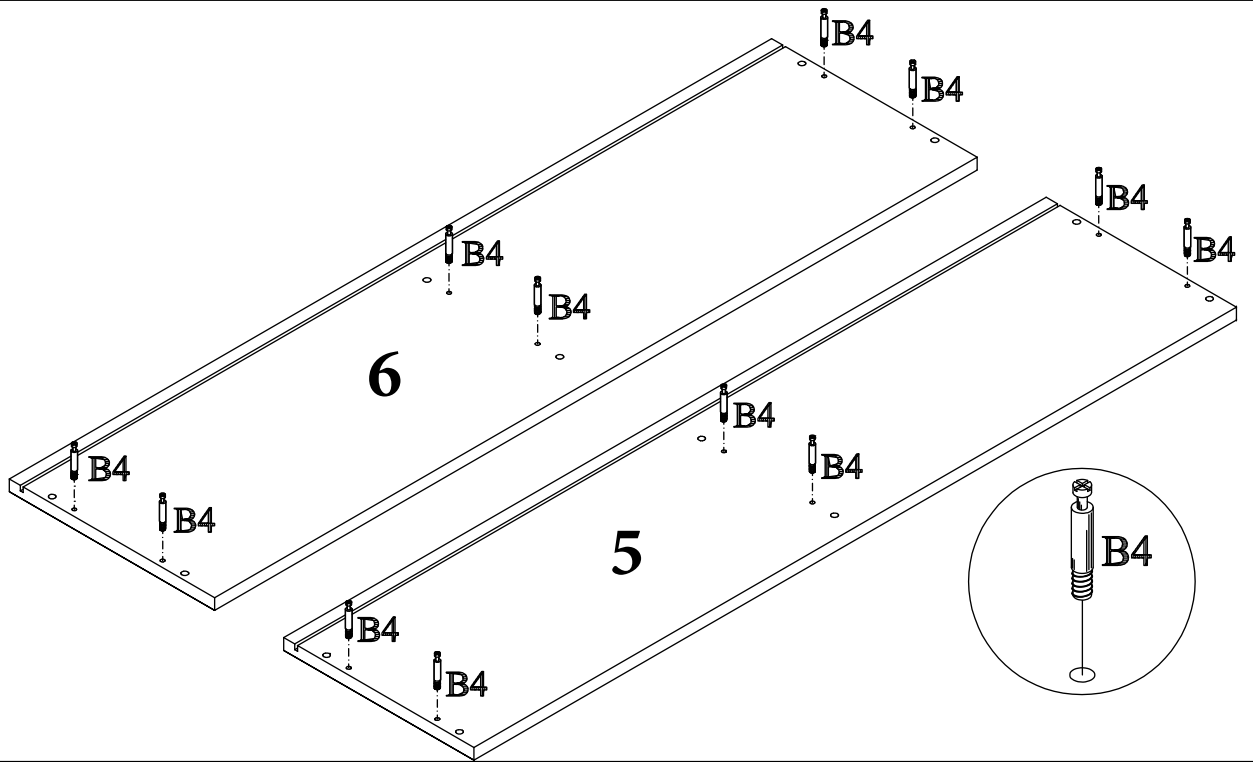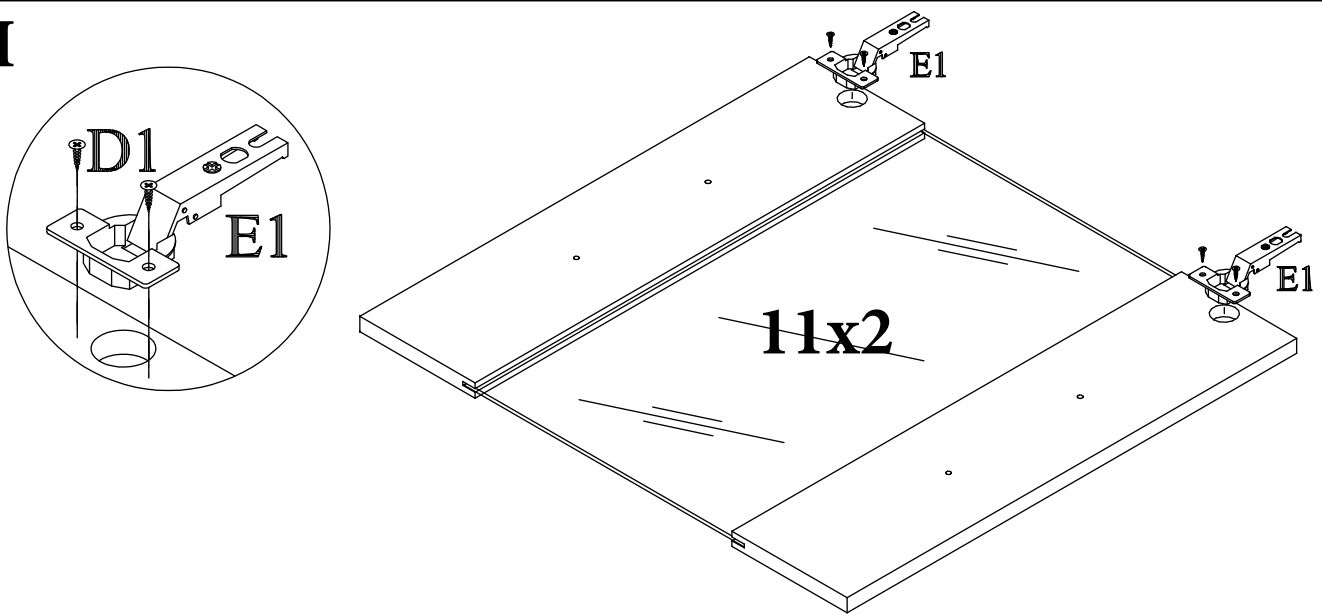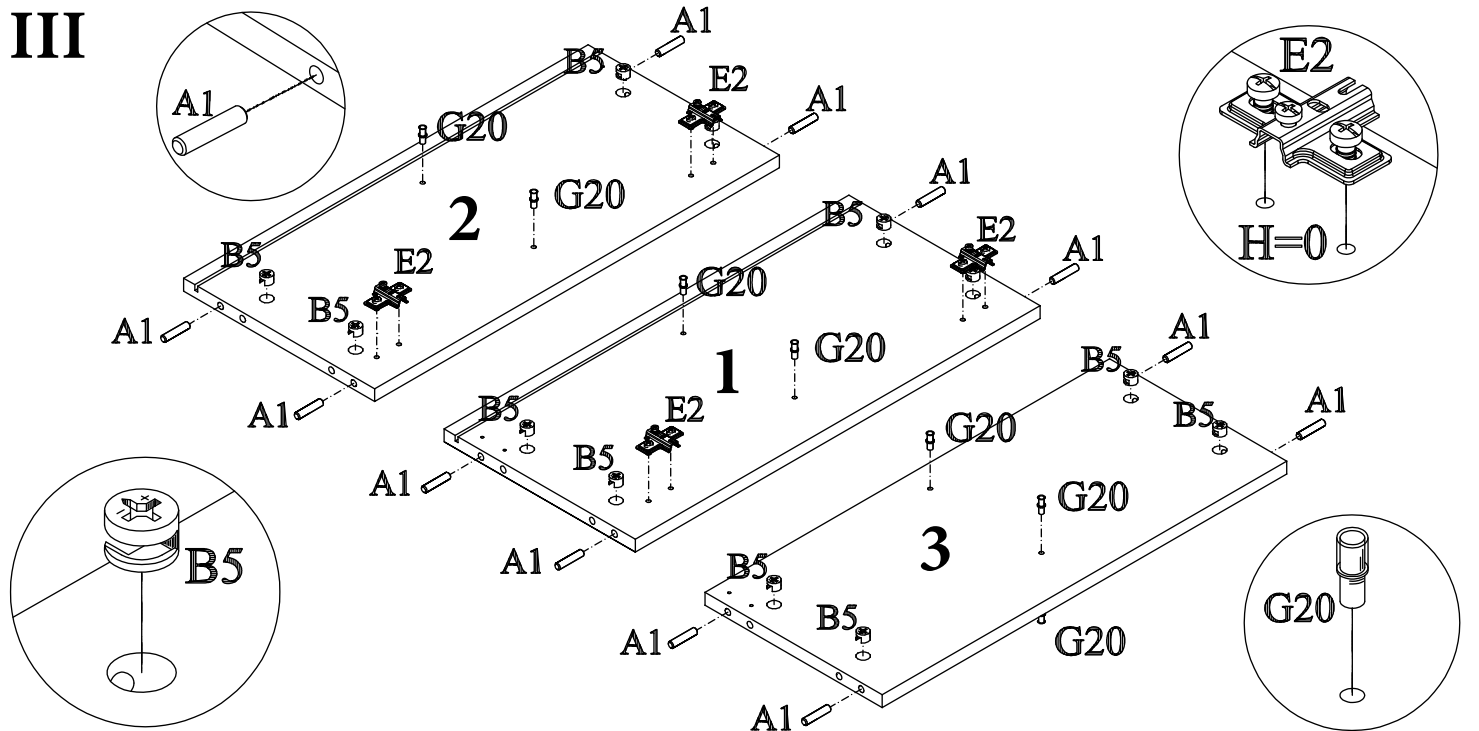   I**II****III**

    IV

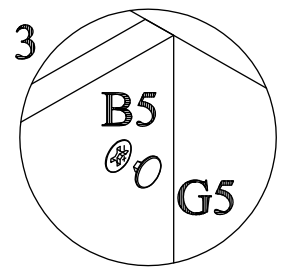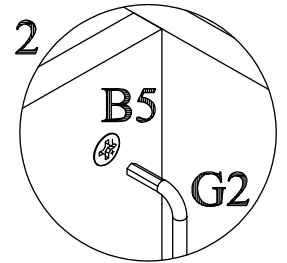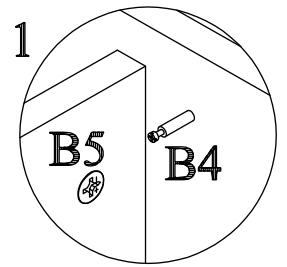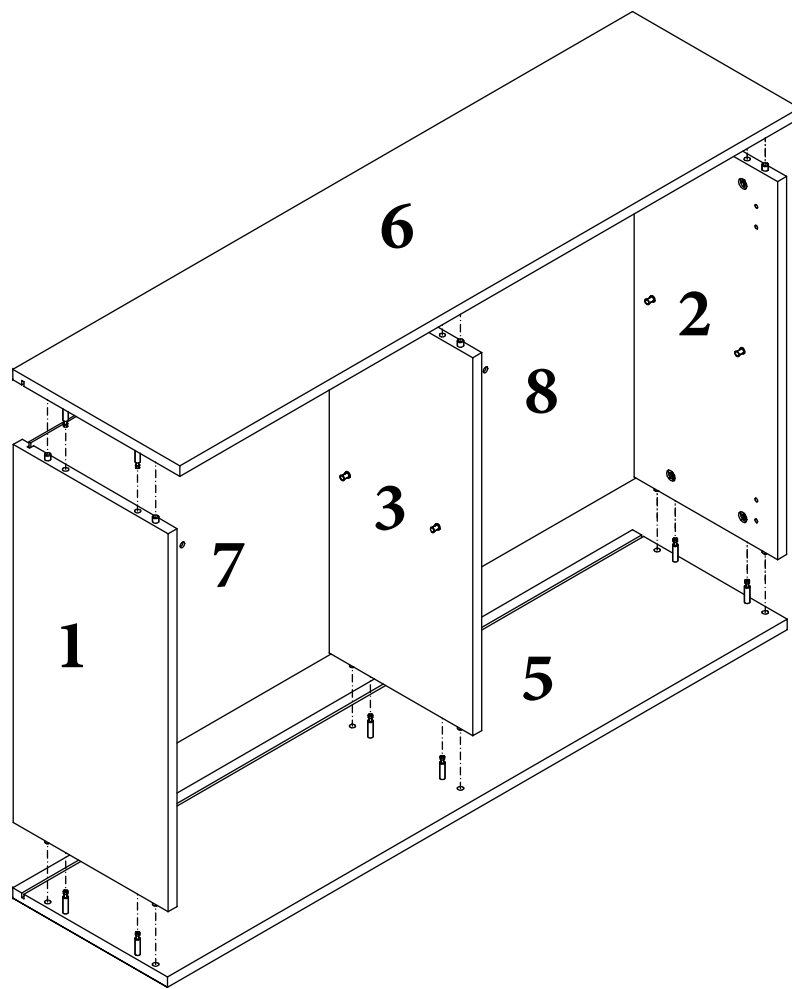

V

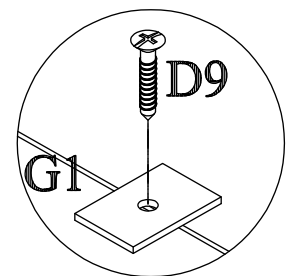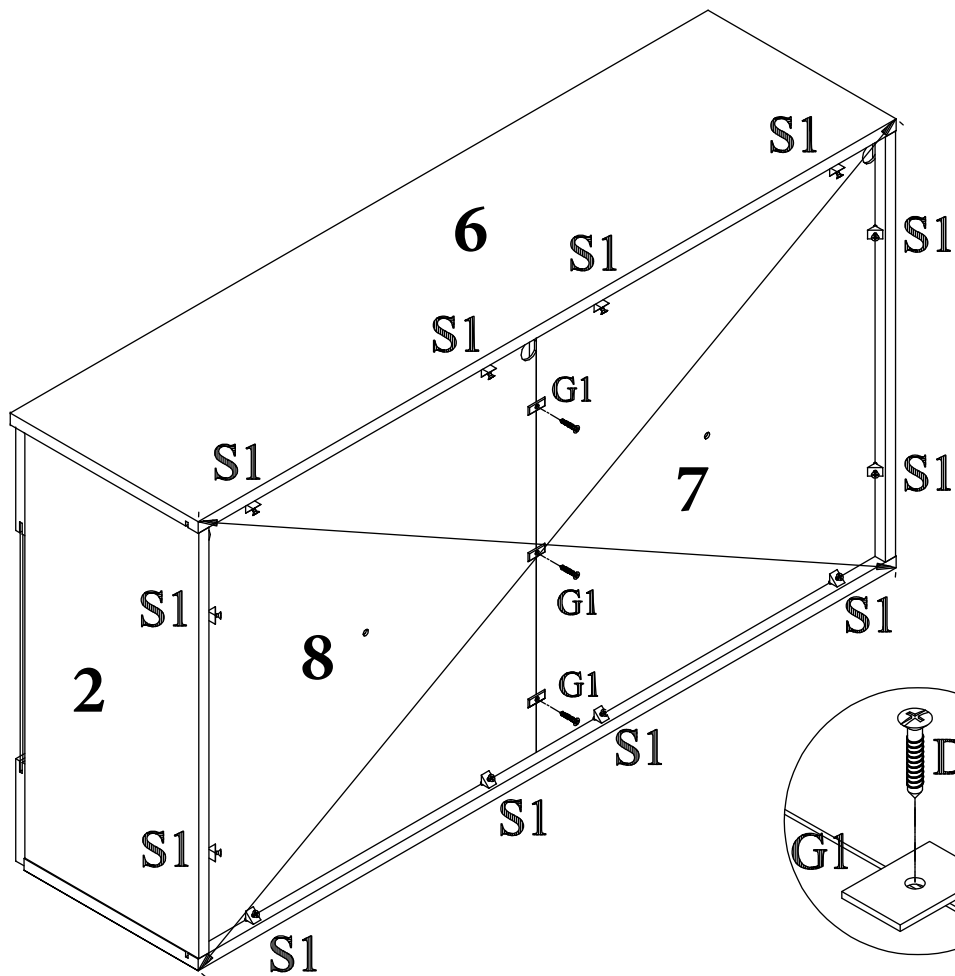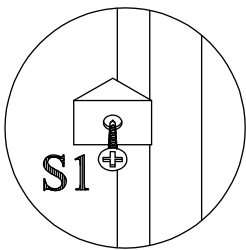   

VI

