

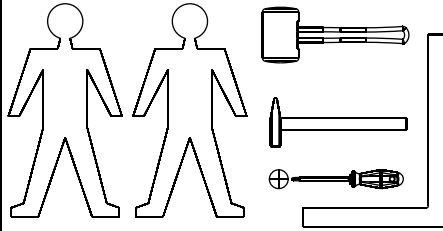
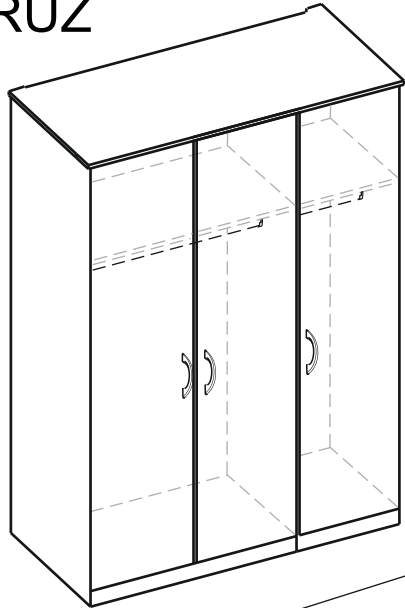
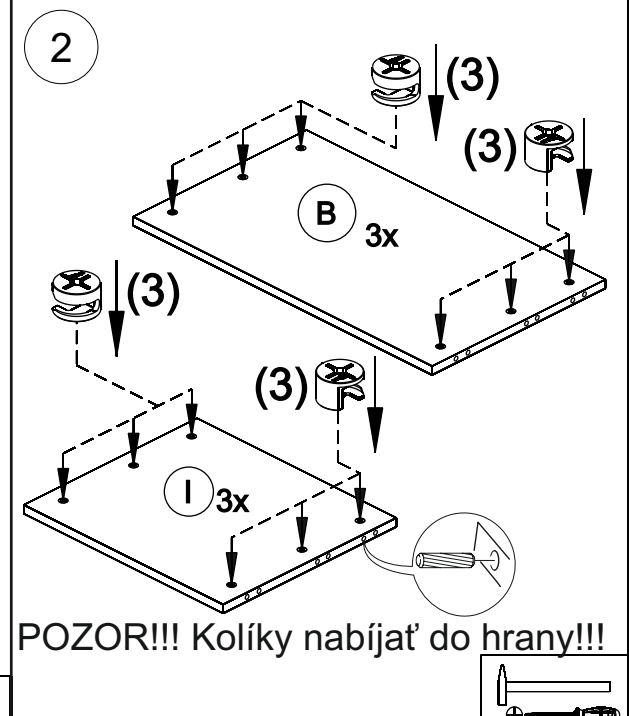




MONTAGEANLEITUNG / MONTÁŽNÝ NÁVOD // SERVISKARTE / SERVISNÁ KARTA


RIO - Šatník 3 dverový CRUZ

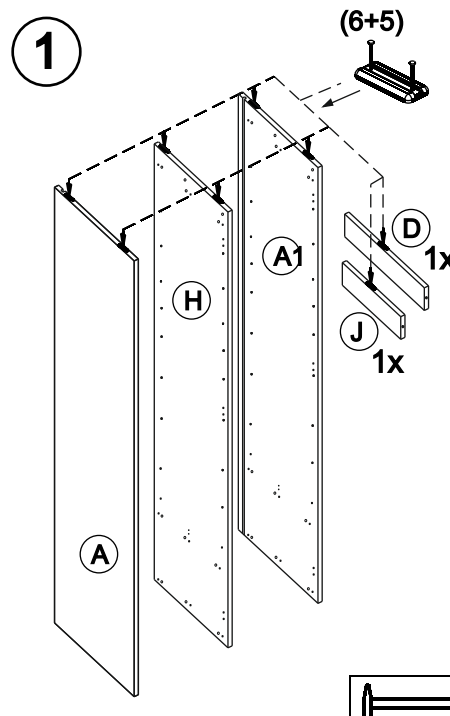

1	$\varnothing 8 \times 35$ x20	2	$\varnothing 5$ x18	3	$\varnothing 15$ x36
4	$\varnothing 15$ x36	5	$\varnothing 1,2 \times 25$ x47	6	x8
7	x8	8	$\varnothing 3,5 \times 20$ x20	9	$\varnothing 3,5 \times 16$ x26
10	x4	11	x3	12	M4x22 x6
13	x9	14	x9	15	
16	x2	17	$\varnothing 4 \times 25$ x2	18	x2 808mm 1ks 391mm 1ks
19	$\varnothing 6$ x9	20	$\varnothing 8 \times 60$ x9	21	x12
22		23		24	

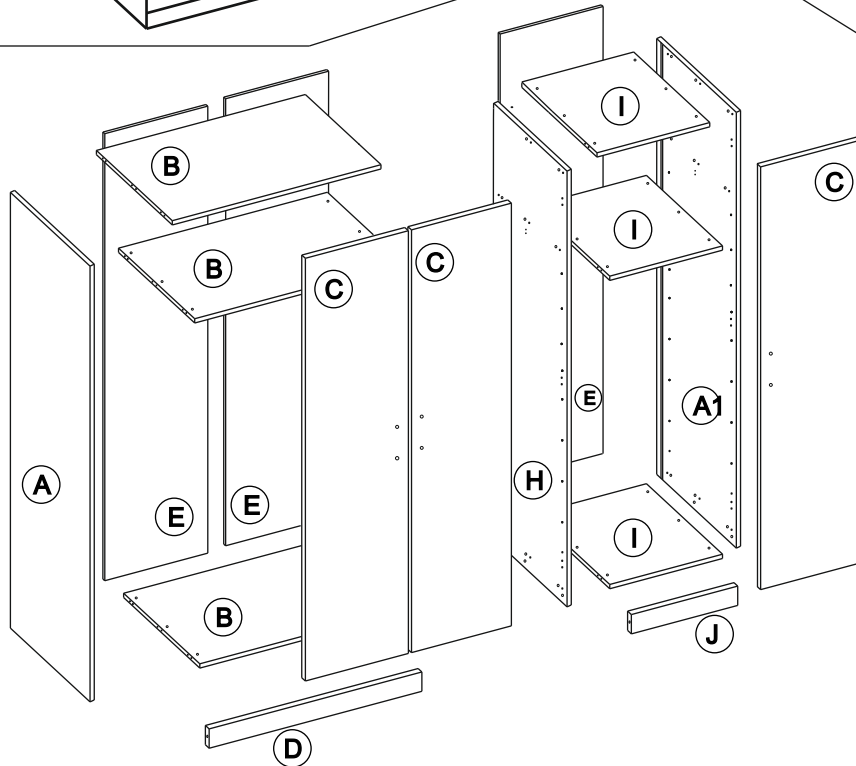

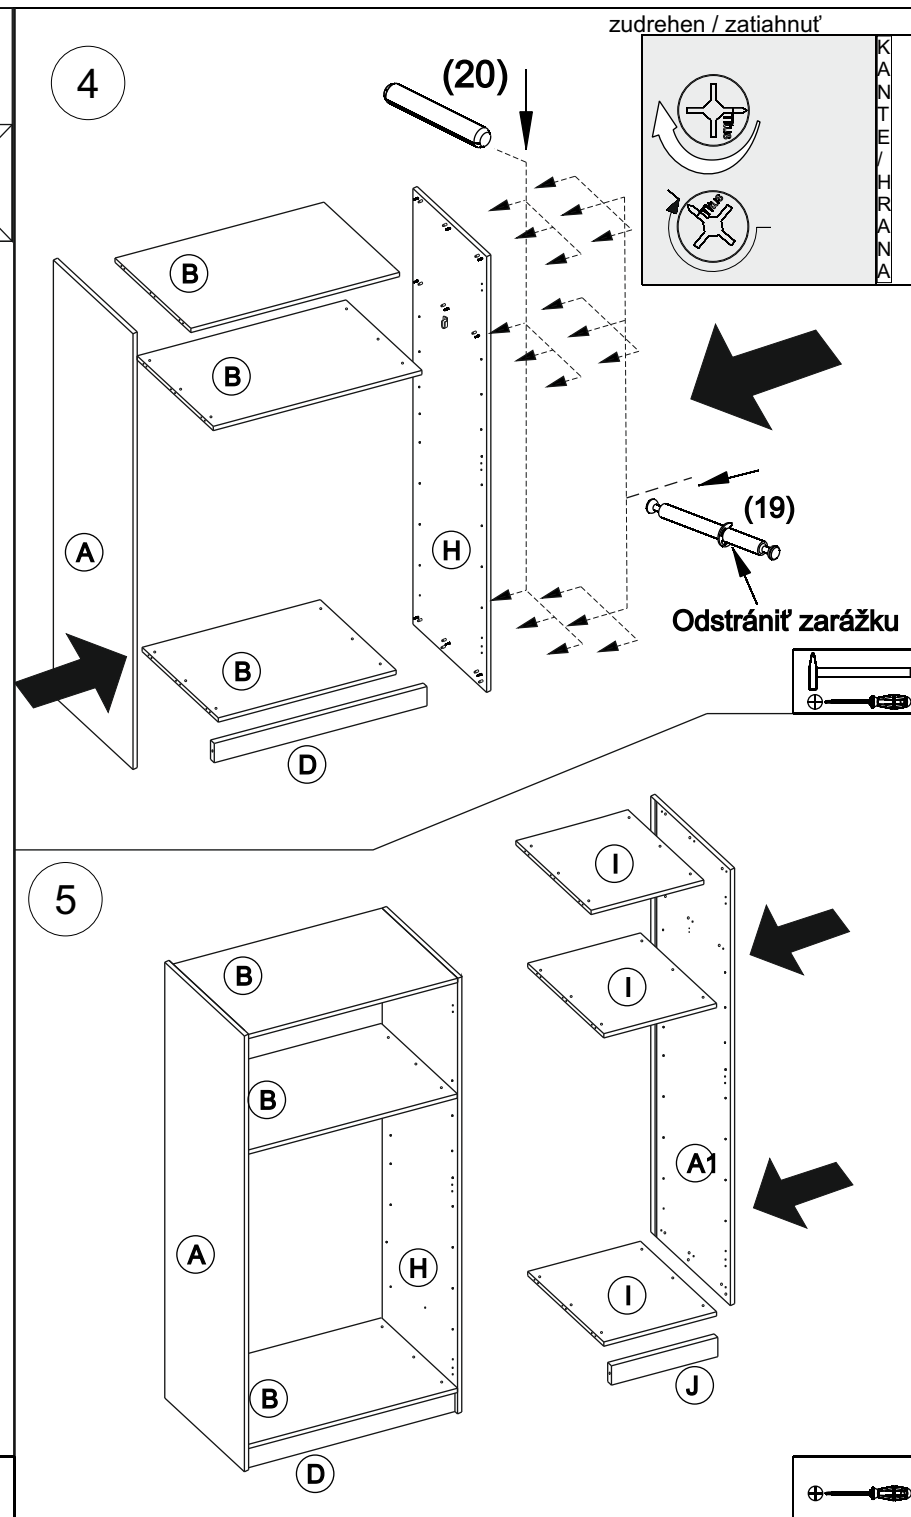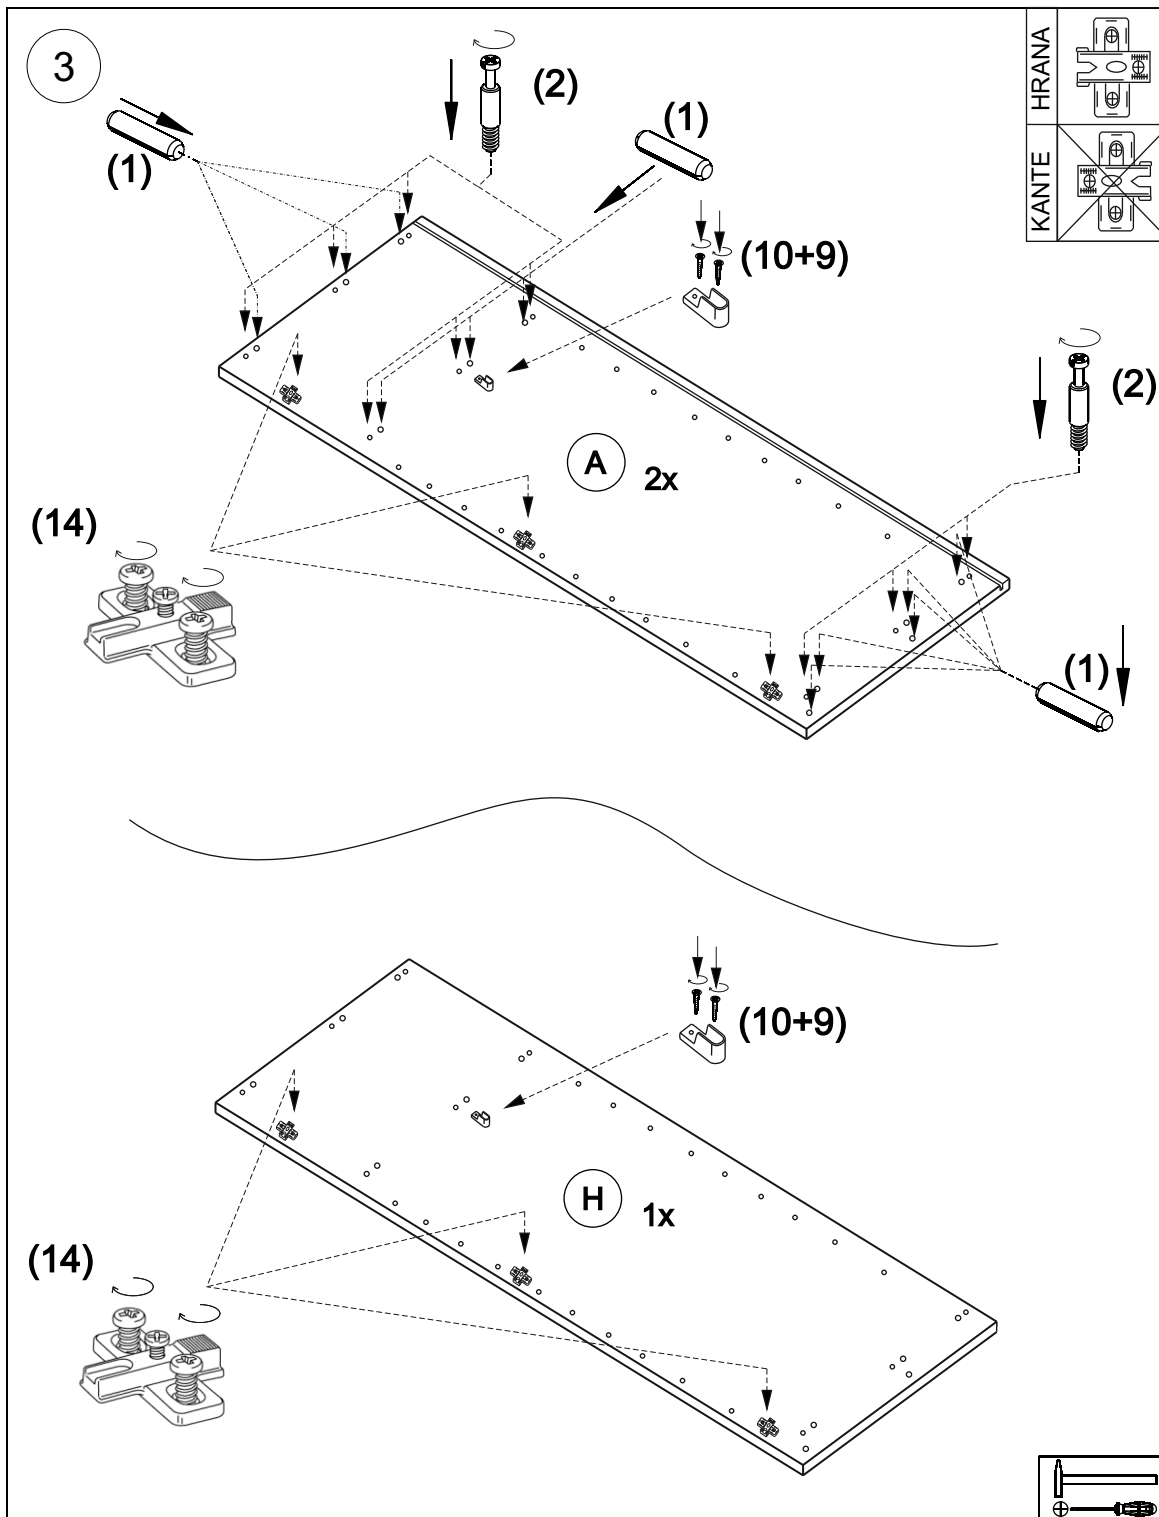

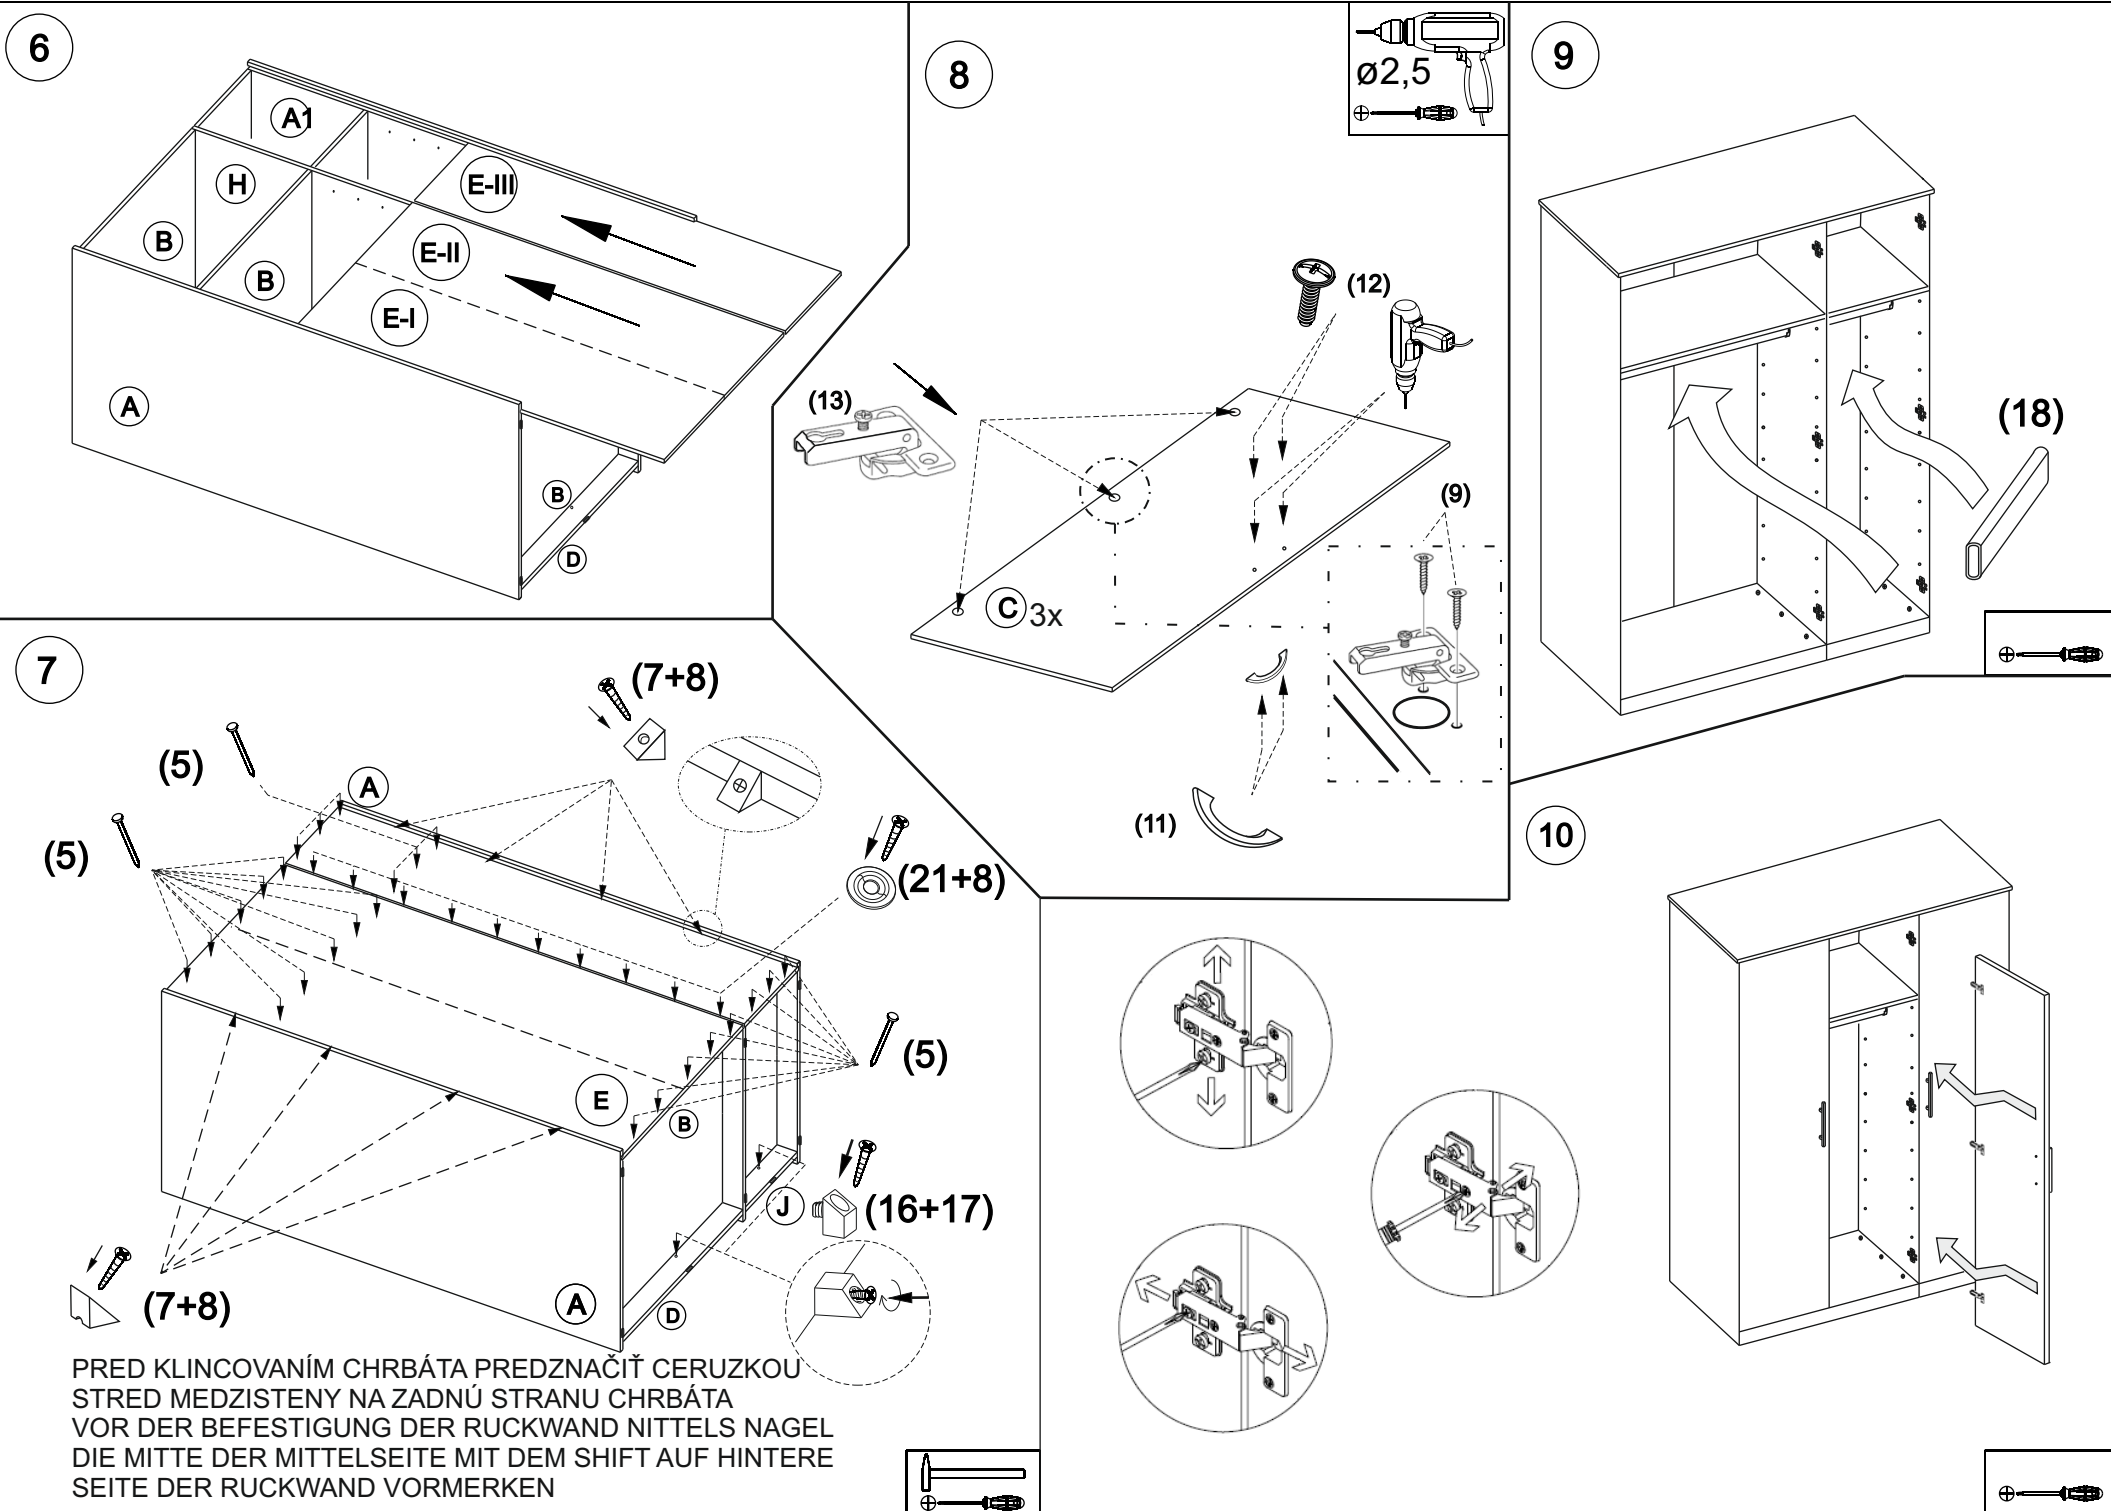

PRED KLINCOVANÍM CHRÁTA PREDZNAČIŤ CERUŽKOU
STRED MEDZISTENY NA ZADNÚ STRANU CHRÁTA
VOR DER BEFESTIGUNG DER RUCKWAND NITTELS NAGEL
DIE MITTE DER MITTELSEITE MIT DEM SHIFT AUF HINTERE
SEITE DER RUCKWAND VORMERKEN