




www.MLMEBLE.pl

GB D CZ SK RUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija




INSTRUKCJA MONTAŻU

MODERN 18
 75 110 58

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :


x 26 KK 8/32	x 49 MD	x 4 KT 6,3/50	x 15 WTLP 3x16	x 15 ZAM	x 4 PA Ø5	x 4 WT 3,5x16	x 4 WT 4x30	x 2 ZPR	x 2 PK H-2	x 4 SP
x 1 PK L-350	x 2 UT 1.151	x 4 SA H20	x 2 SG 8/8	x 4 WE 6,3x13 B	x 6 WE 6,3x13ES	x 1 klej / glue / kleber / lepidlo / lepidlo / клей / kljaj	x 1 kluczyk / key / schlüssel / klíč / kľúč / kľuč / raktas			


do montažu potrebne są:
 are needed for assembly:
 sind erforderlich für die montage:
 jsou potřebné pro montáž:
 sú potrebné pre montáž:
 которые необходимы для сборки:
 Surinkimui reikės:

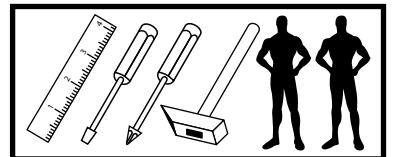

UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DÉMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

Nr/No	Szt/Qty
1	1
2	1
3	1
4	1
5	1
6	1
7	1
8	1
9	1
10	1
11	1
12	1
13	1
14	1
15	1
16	1
17	1
18	1
19	1
20	1
21	1
21	1

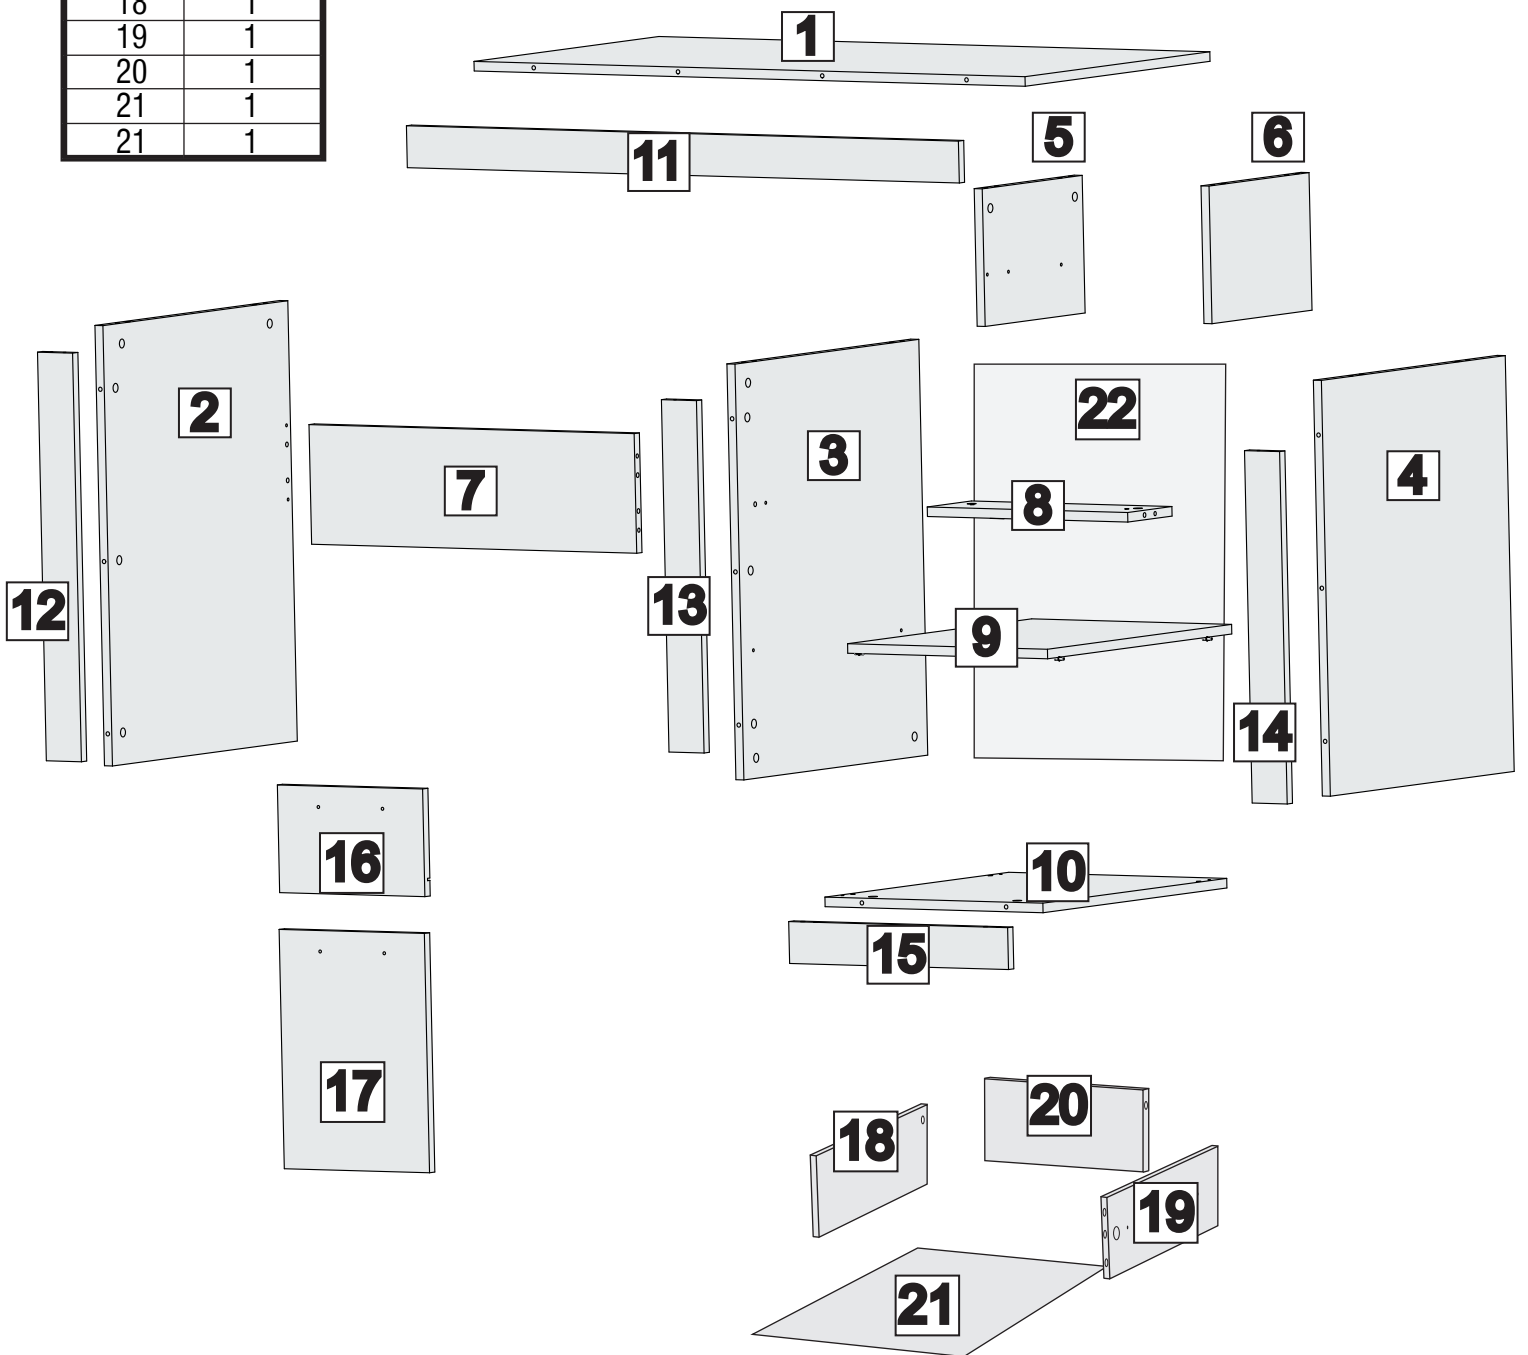

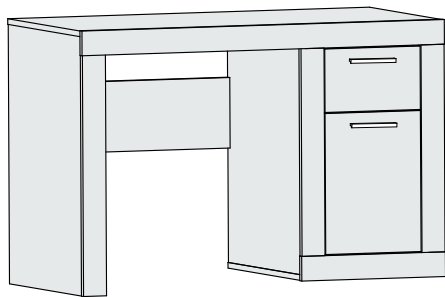

! UWAGA ! - Wypinanie prowadnicy
WARNING! - guides disassembling
WARNING! - Ausstecken Führer
POZOR! - vytažení pojezdů
POZOR! - sprievodca pre montáž nábytku
ВНИМАНИЕ! - демонтаж направляющих
DĒMESIO! - Išrinkimas atskyrimas

