



www.MLMEBLE.pl


GB D CZ SK RUS LT
 assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija



INSTRUKCJA MONTAŻU

ST 140-01


↑76 →140/180 ↘82



akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксесуары / furnitūra :

<p>x 44</p> <p>KK 8/32</p>	<p>x 2</p> <p>klej / glue / kleber / lepidlo / lepidlo / клей / kijai</p>	<p>x 8</p> <p>SG 8/8</p>	<p>x 4</p> <p>ZMD</p>	<p>x 20</p> <p>MD</p>	<p>x 8</p> <p>MD2</p>	<p>x 42</p> <p>WT 3,5x16</p>	<p>x 64</p> <p>WTLP 3,5x20</p>	<p>x 2</p> <p>PRS L650</p>	<p>x 4</p> <p>ZDS</p>	<p>x 6</p> <p>ZU Ø8</p>
<p>x 4</p> <p>WDS</p>										

do montażu potrzebne są:
 are needed for assembly:
 sind erforderlich für die montage:
 jsou potřebné pro montáž:
 sú potrebné pre montáž:
 которые необходимы для сборки:
 Surinkimui reikės:

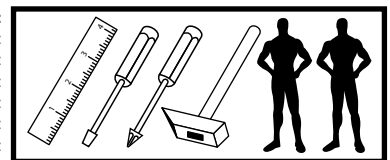

! UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

Nr/No	Szt/Qty
1	1
2	1
3	1
4	2
5	2
6	2
7	2
8	2
9	2
10	2

