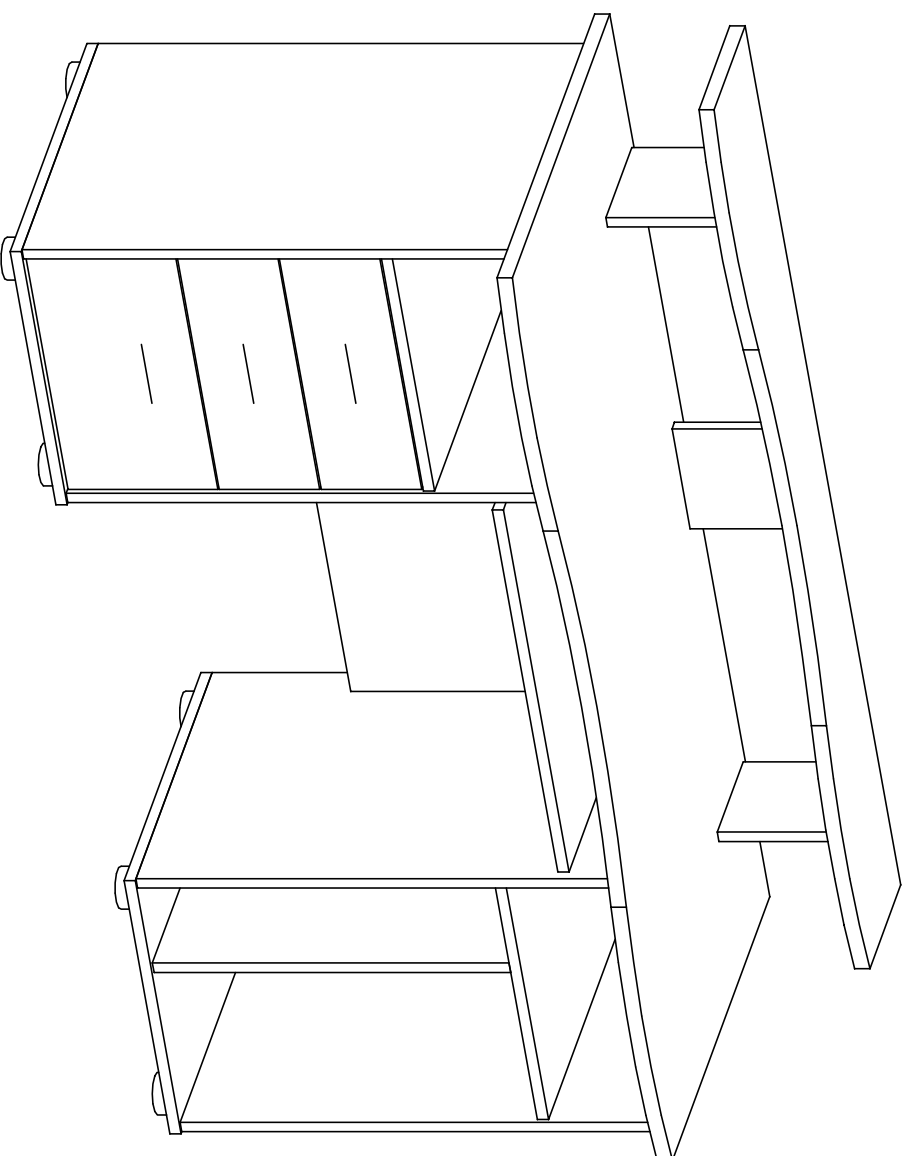








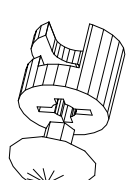

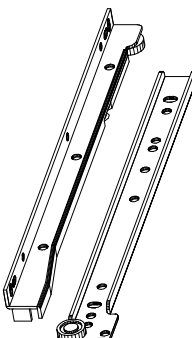





Montážny návod PROFI



<p>T</p>  <p>x2</p>	<p>M</p>  <p>x3</p>
<p>O</p>  <p>4 x 30</p> <p>x6</p>	<p>K</p>  <p>x6</p>
<p>W</p>  <p>x8</p>	<p>S</p>  <p>M4 x 8</p> <p>x6</p>
<p>L</p>  <p>x11</p>	<p>F</p>  <p>ø8 x 35</p> <p>x58</p>
<p>H</p>  <p>x11</p>	<p>G</p>  <p>4 x 13</p> <p>x20</p>
<p>C</p>  <p>x2</p>	<p>A</p>  <p>x25</p>
<p>Z</p>  <p>x1</p>	<p>Z</p>  <p>x1</p>

