


PELLO





TYP 22 - SKRINA 3D

Indeks výrobku: PRO-010-2201



Dátum : 05-11-2010

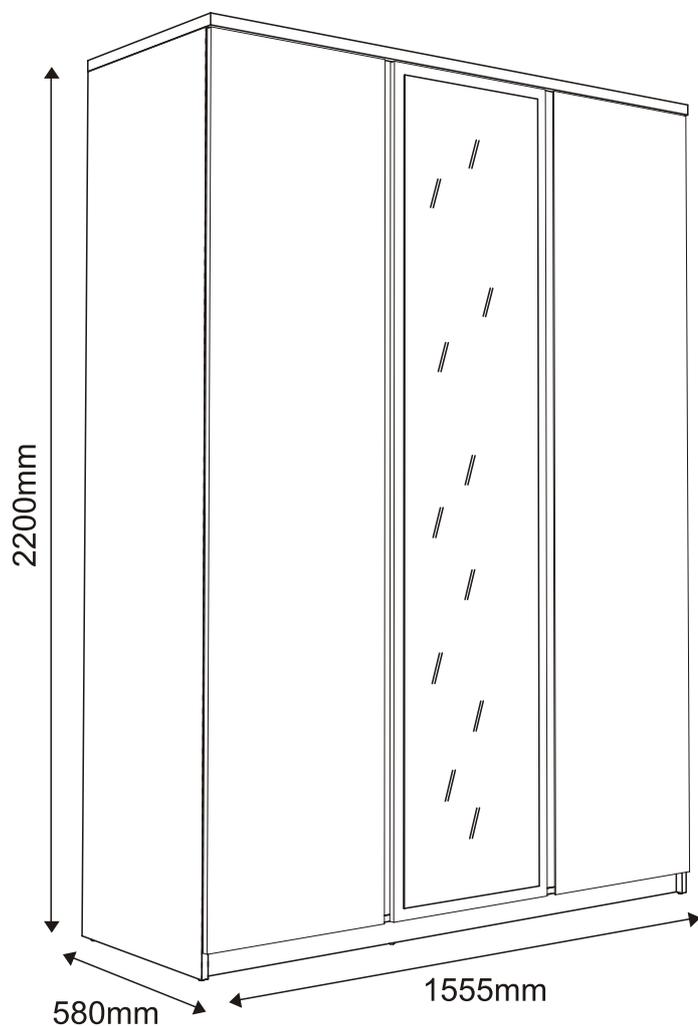


Kovanie:

A1 44 ks. Kolík - $\varnothing 8 \times 35\text{mm}$ 	B0 9 ks 	B1 9 ks 
C1 18 ks 	D2 16 ks 	E0 33 ks 
E1 33ks $\varnothing 15$ 	F1 33 ks 	G0 8 ks 
G1 8 ks 	I2 2 ks 	M 1 ks 
N1 80 ks 	O2 8 ks 	Q9 2 ks 
P4 4 ks 	R1 9 ks 	Z1 2 ks 


Potrebné náradie:

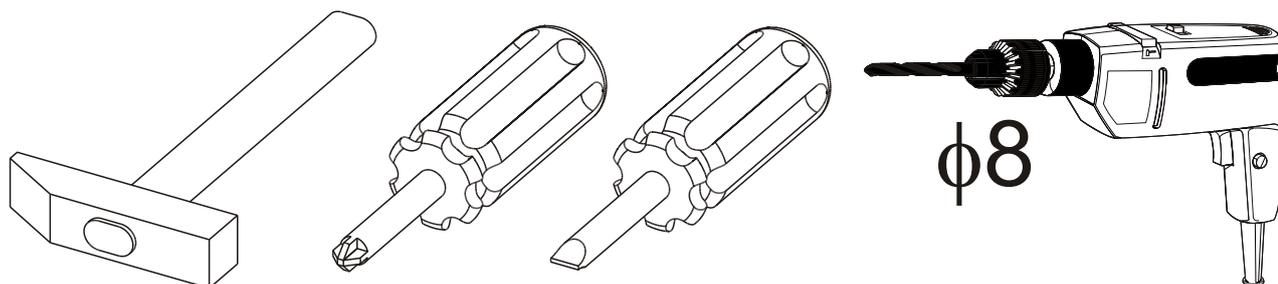


1 Lavy bok
1 ks

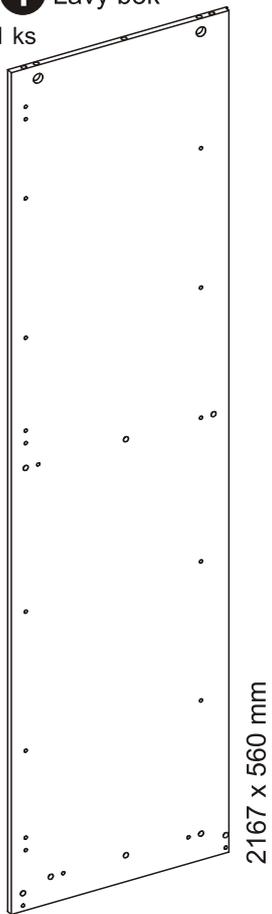

2 Stred
1 ks

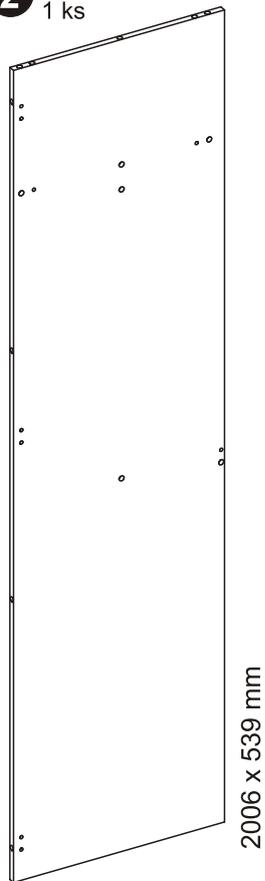

3 Pravy bok
1 ks

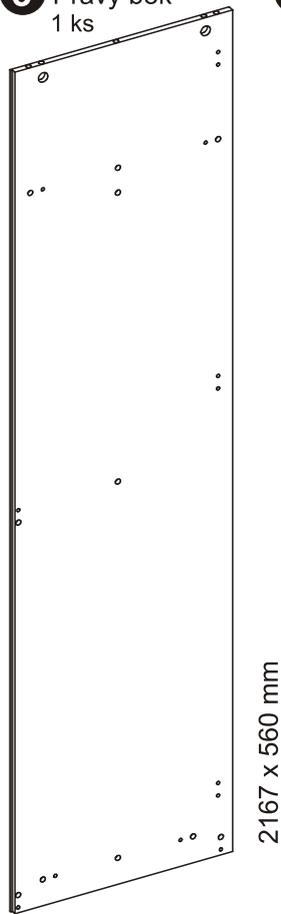


10 Lava lišta
1 ks.




12 Pravá lišta
1 ks




11 Bočná lišta
1 ks




4 Vrchná doska
1 ks

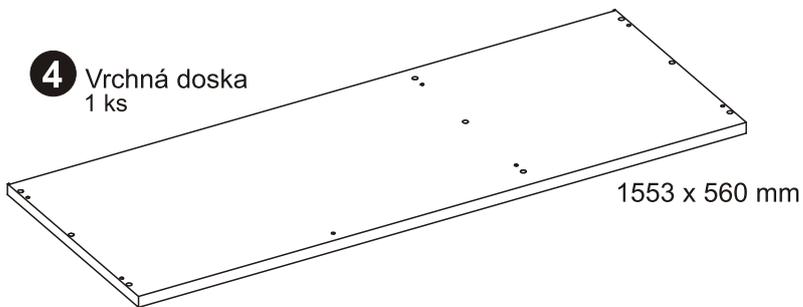


7 1 ks

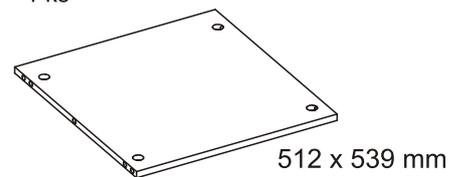


5 Spodná doska
1 ks

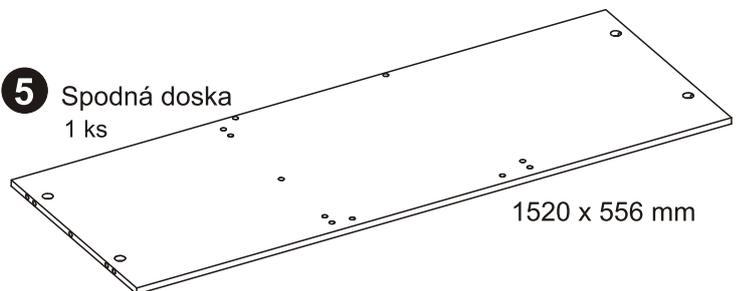


6 1 ks

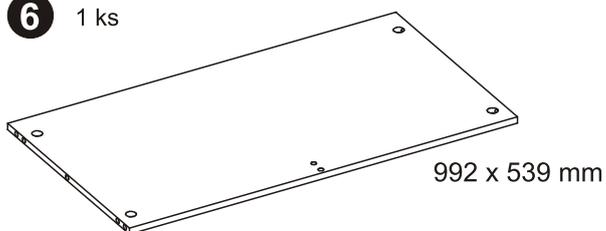


8 Cokel
2 ks

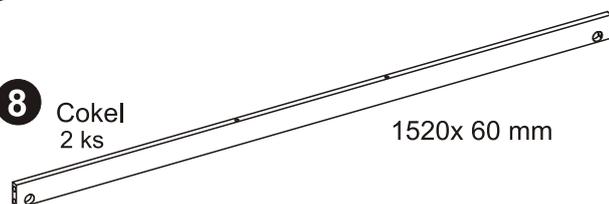


9 Lišta
1 ks

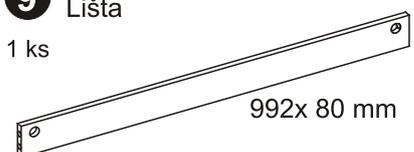


13 Právě dveře
1 ks

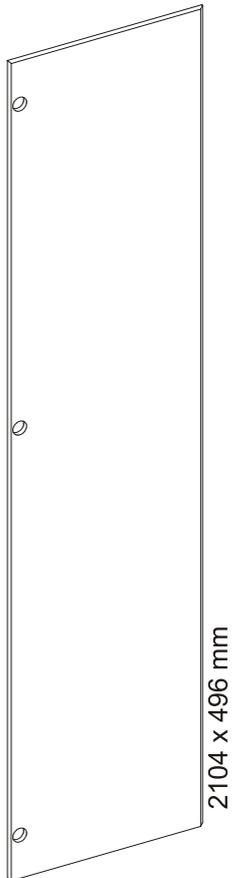


14 Lavé dveře
1 ks

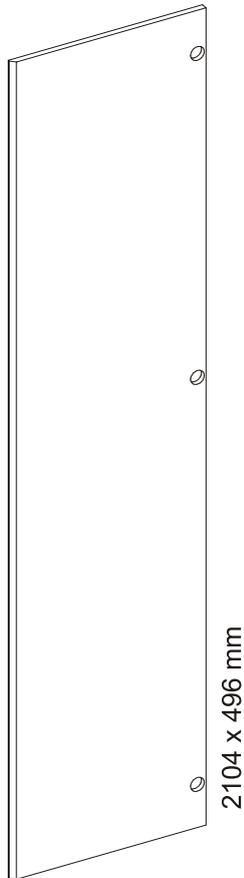


15 Dveře so
Zrkadlom
1ks

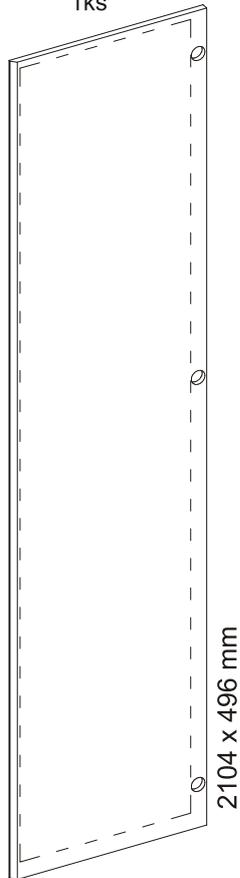

16 1 ks

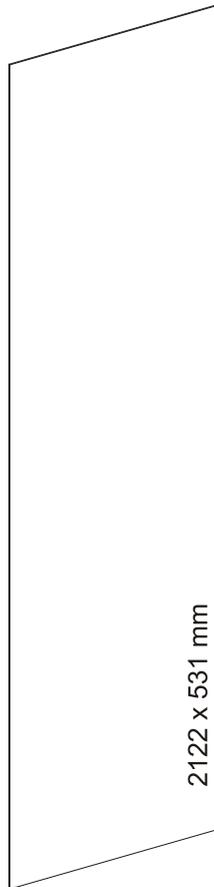


17 1ks

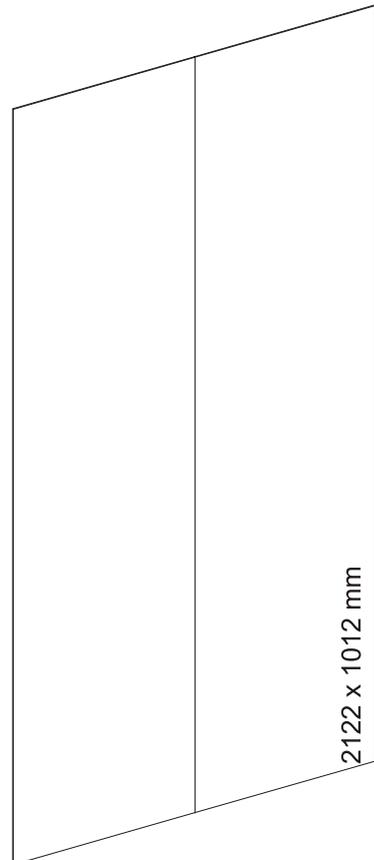


18
4 ks

Polička

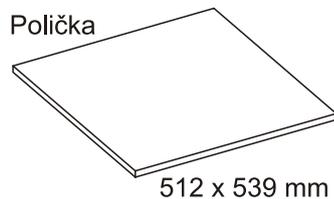


512 x 539 mm


Krok 1:

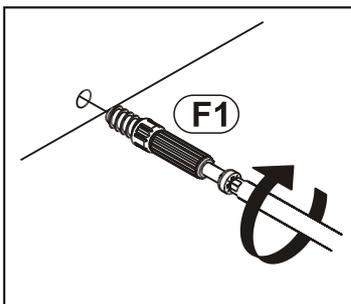


Krok 2:

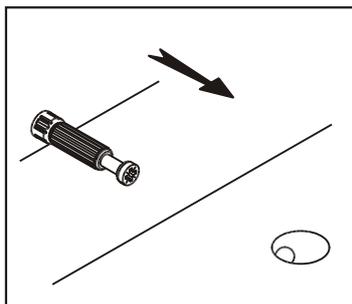




Krok 3:

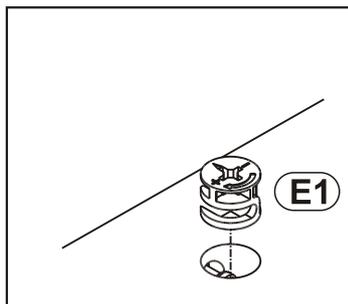



Krok 4:

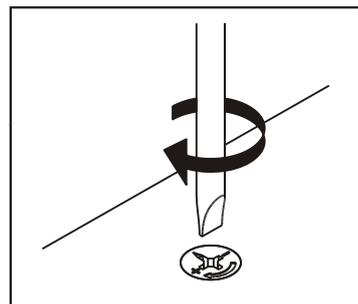


1 ▶

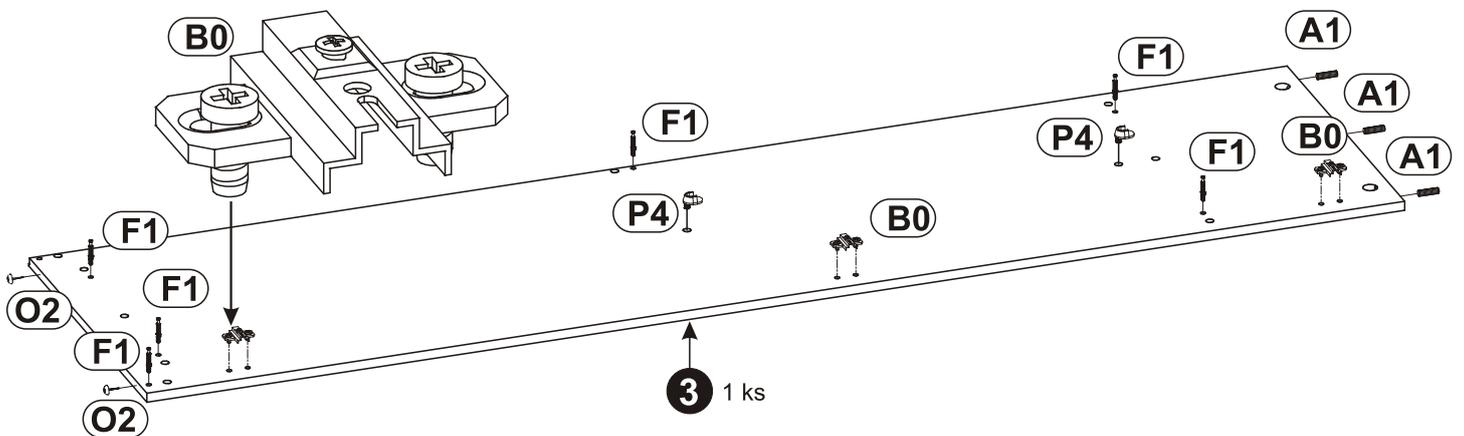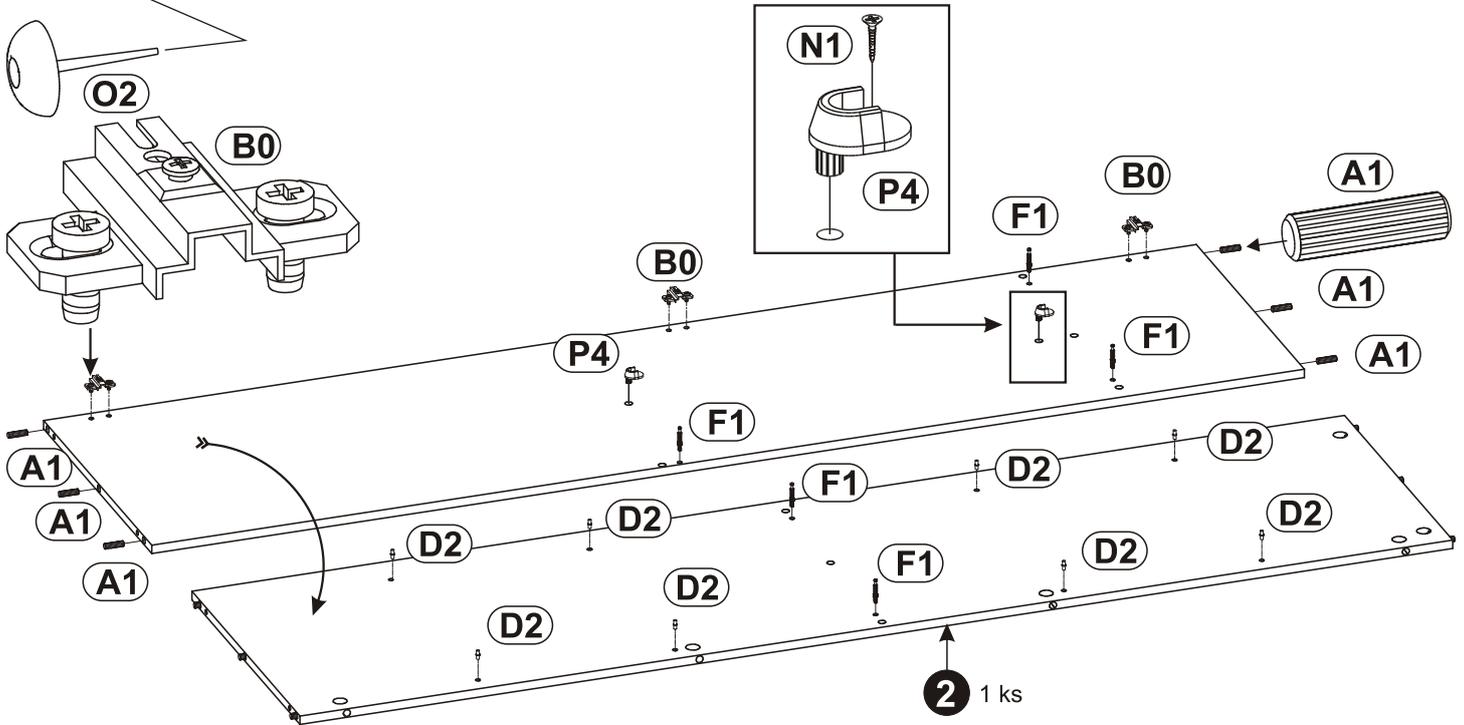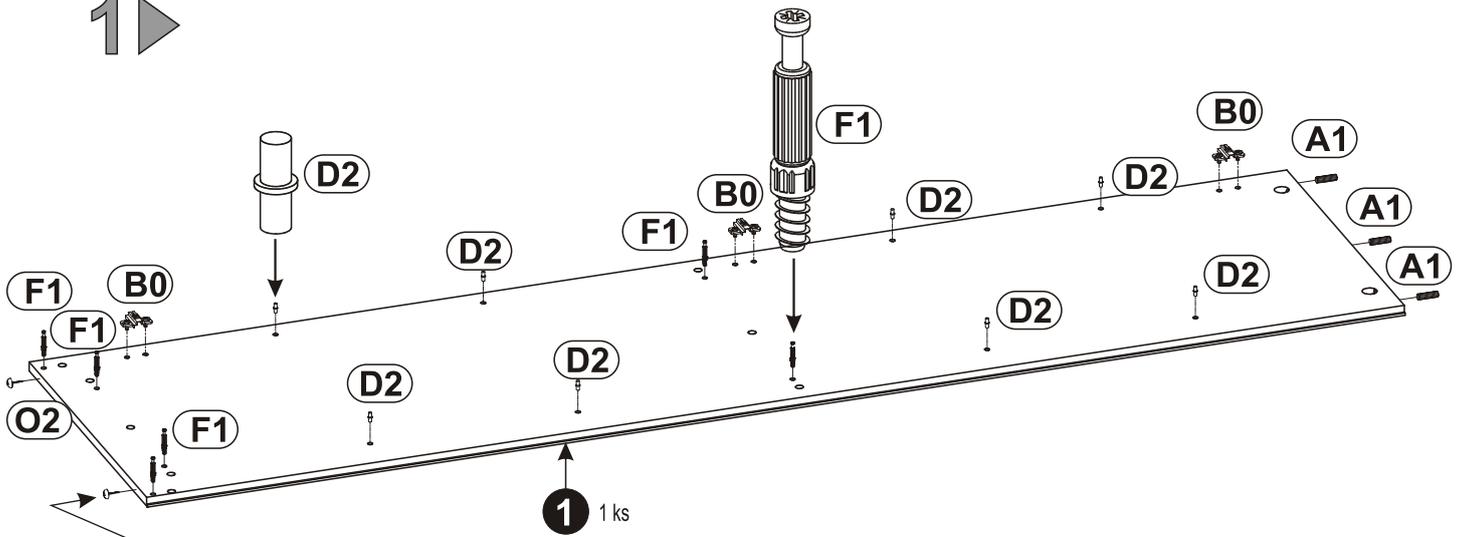


2 ▶

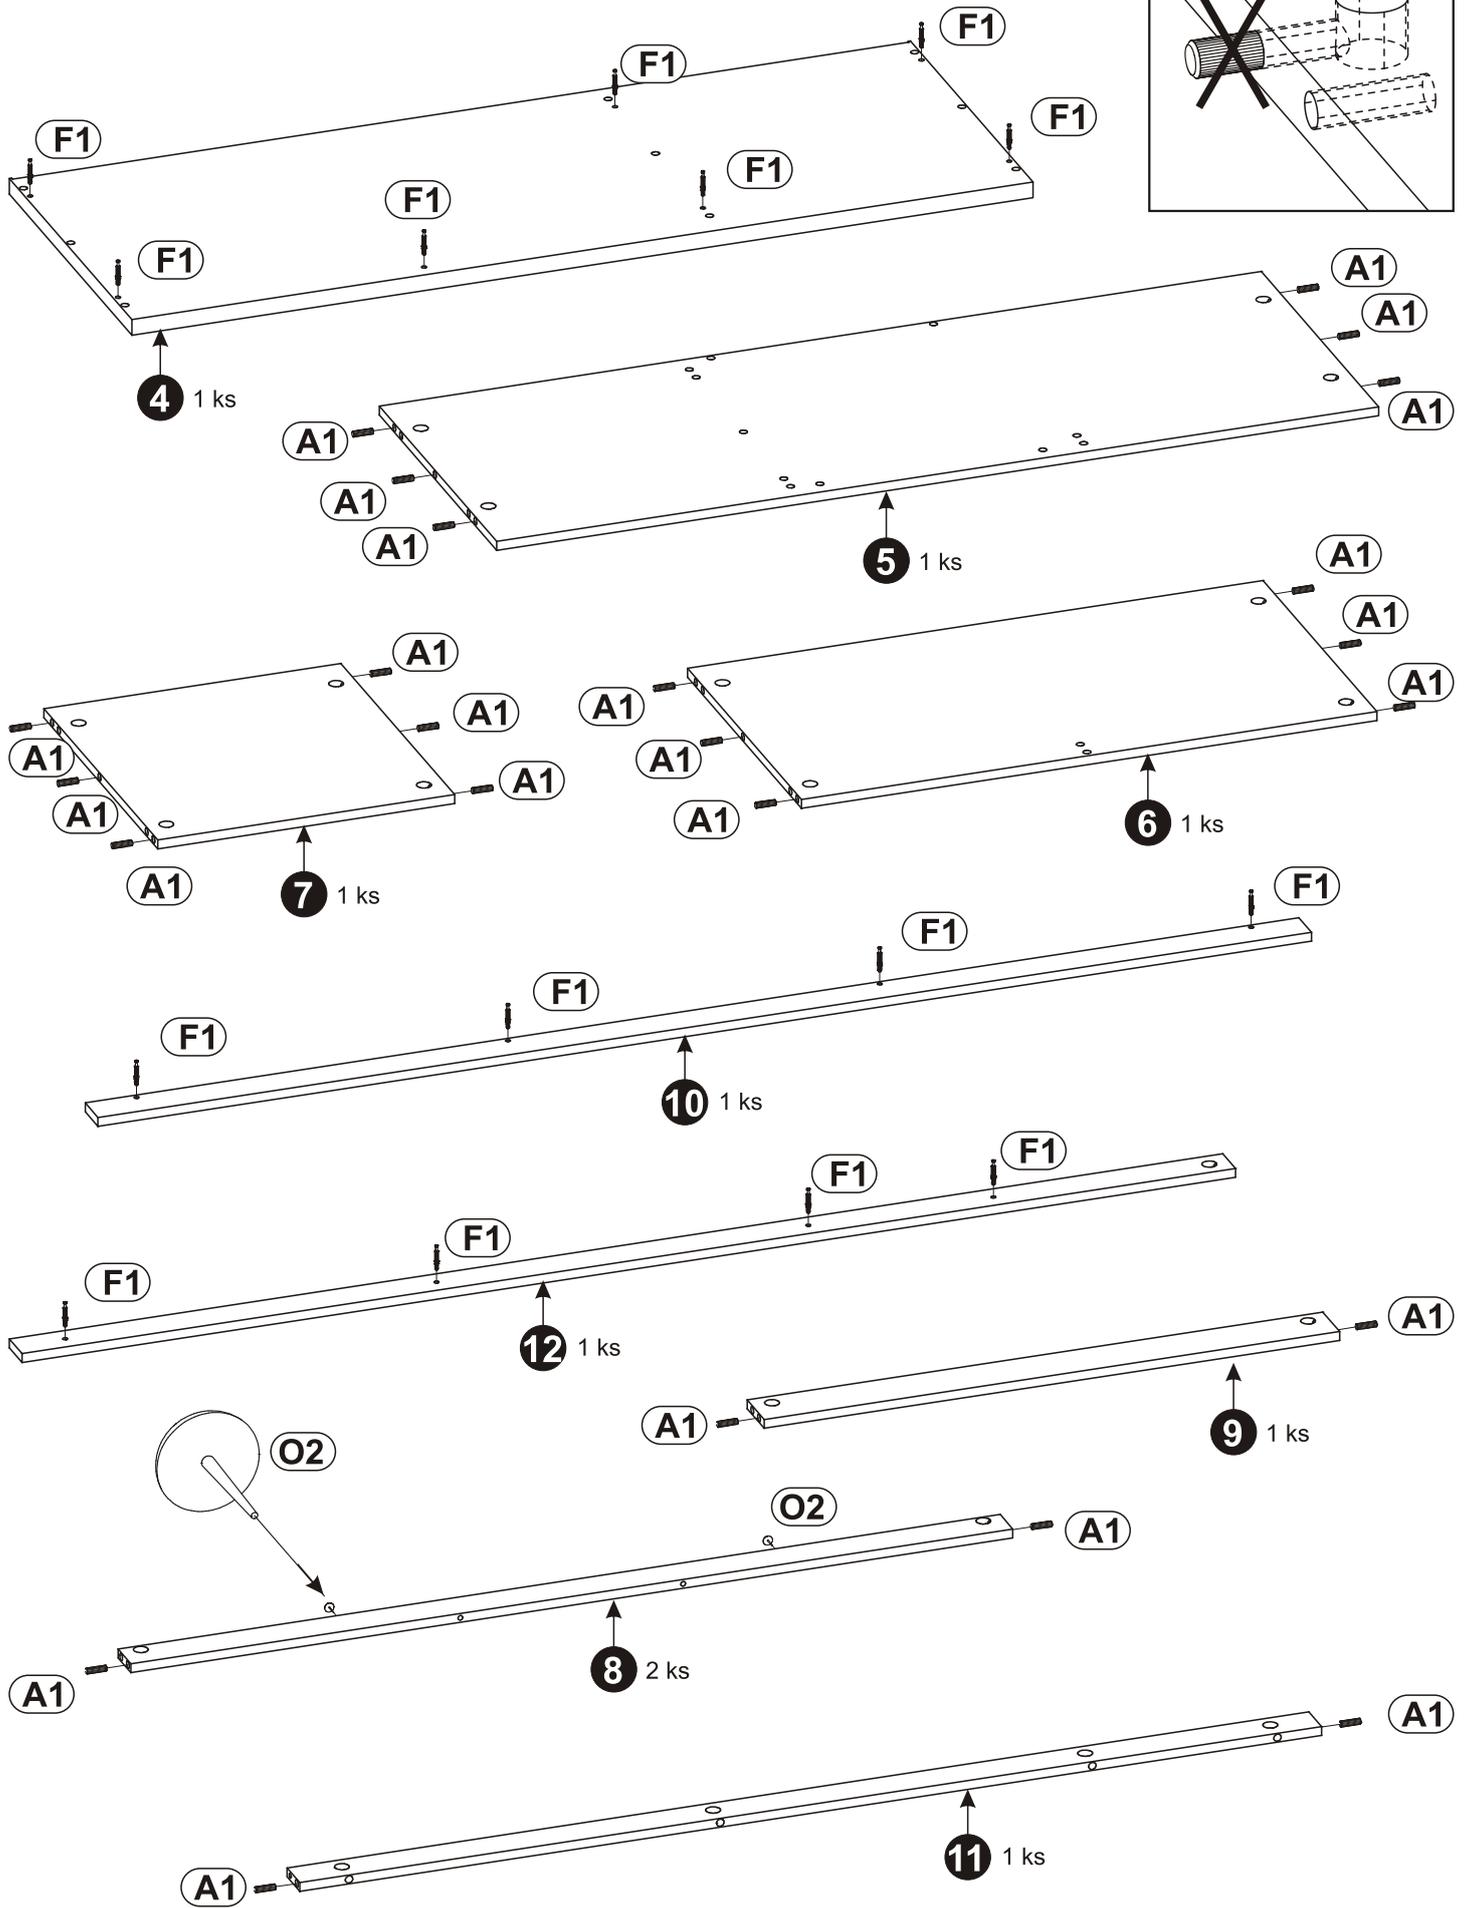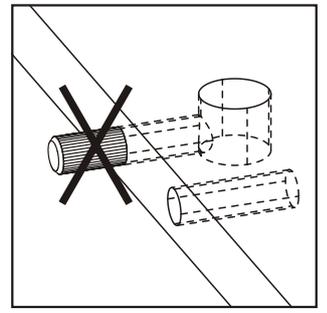


3 ▶

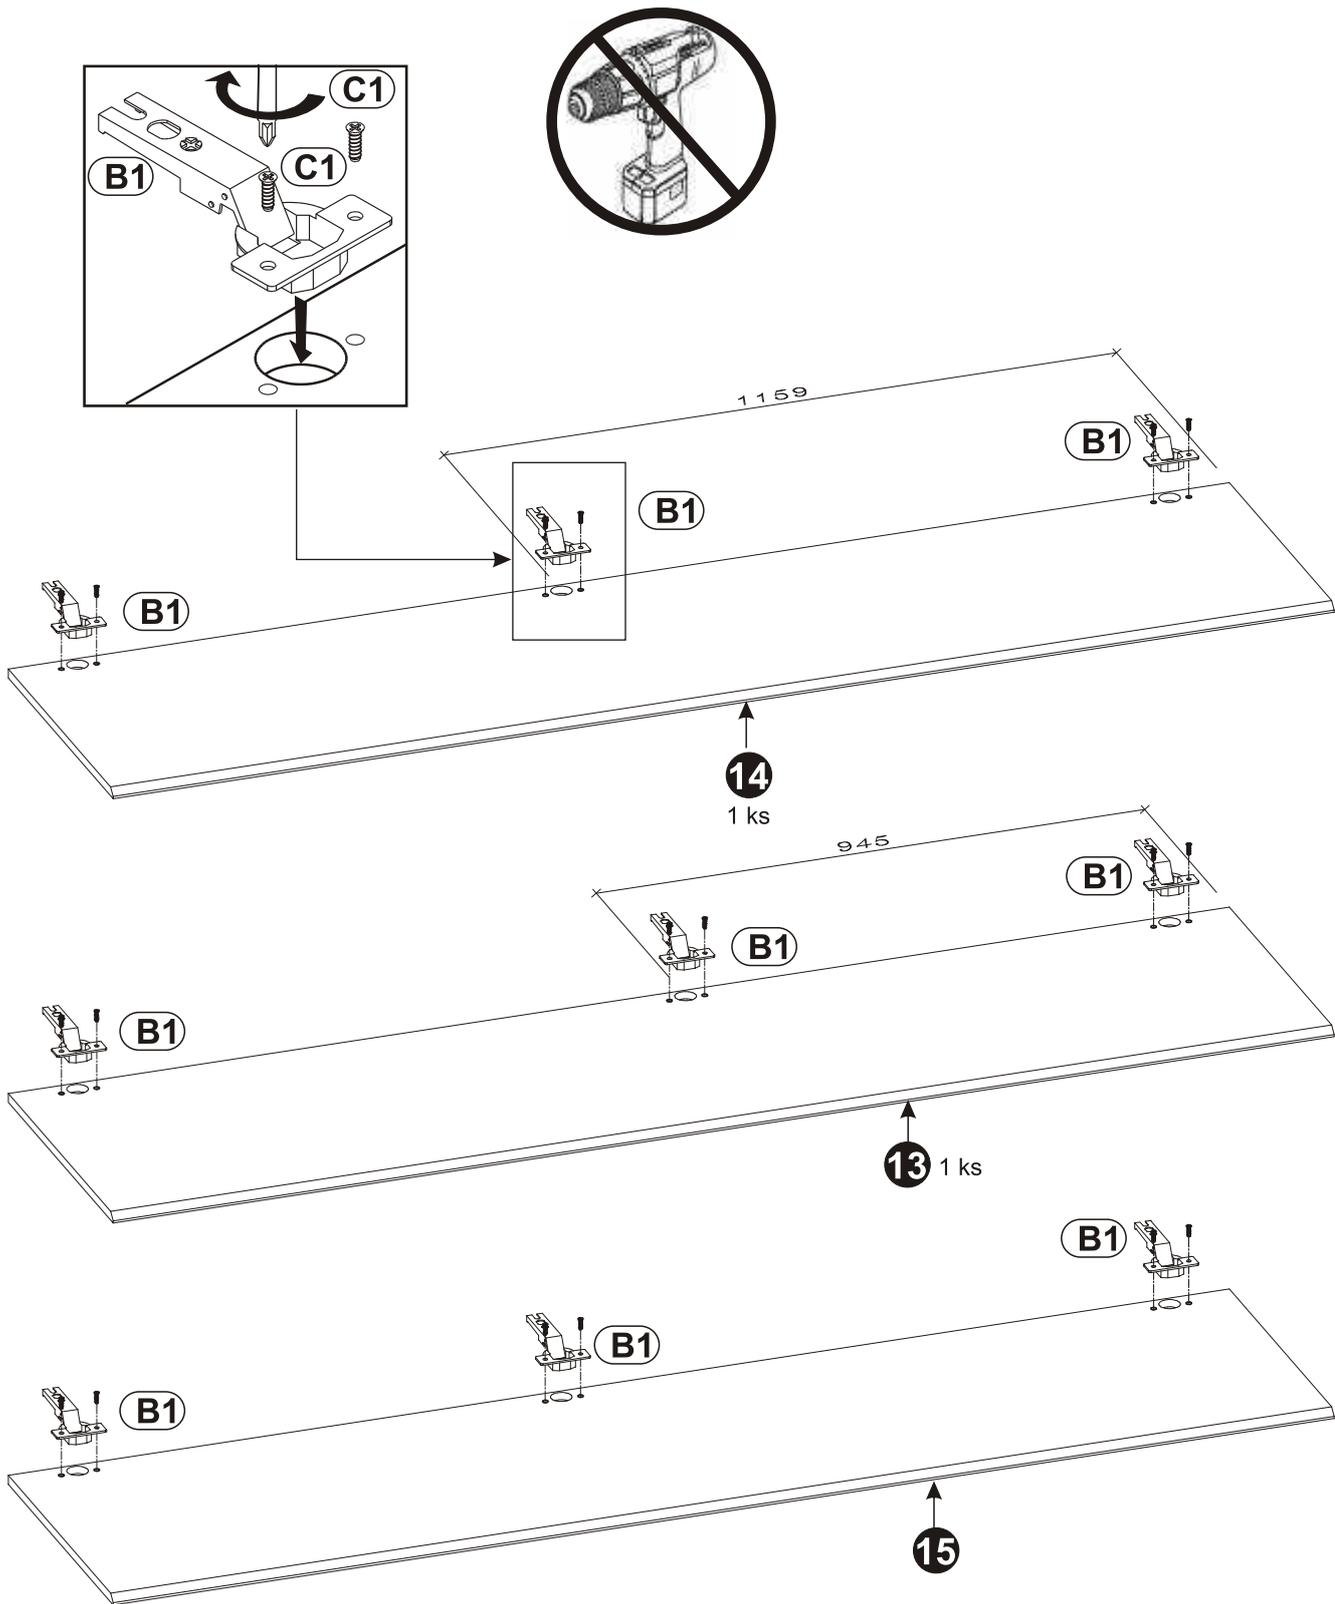


4 ▶

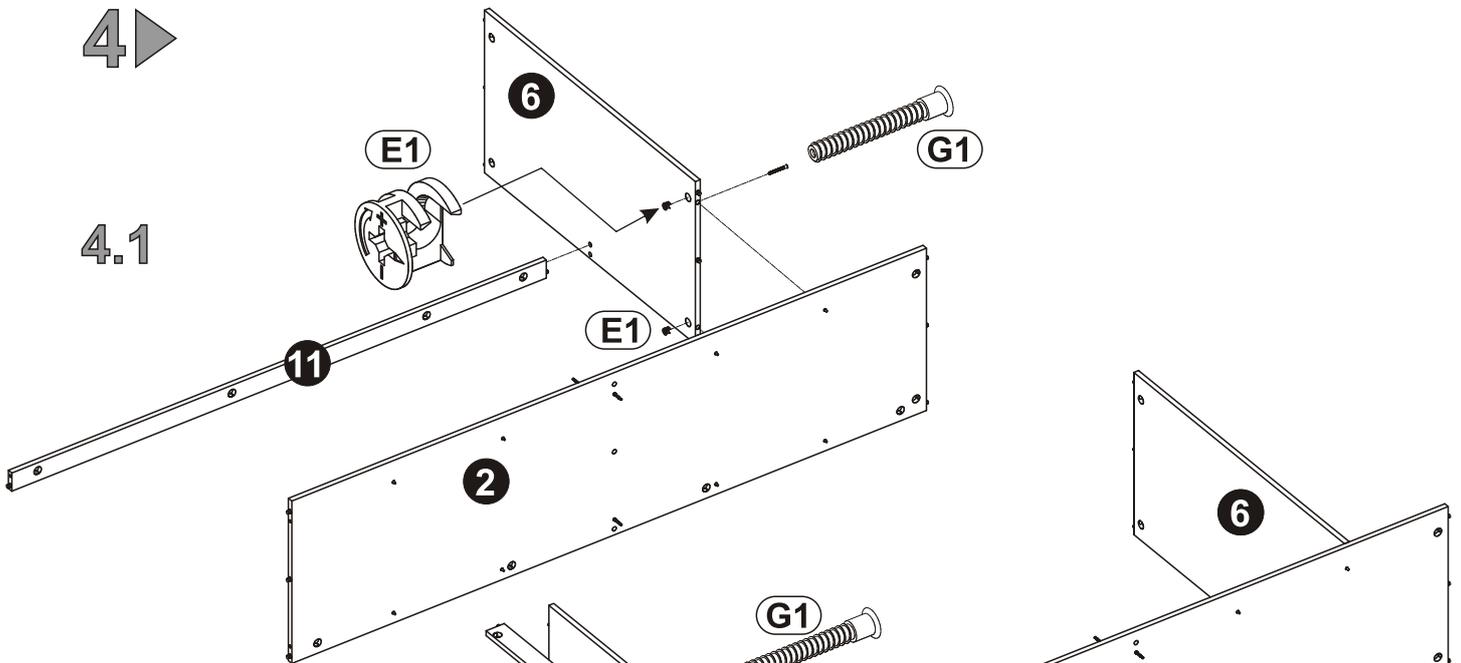


4.2

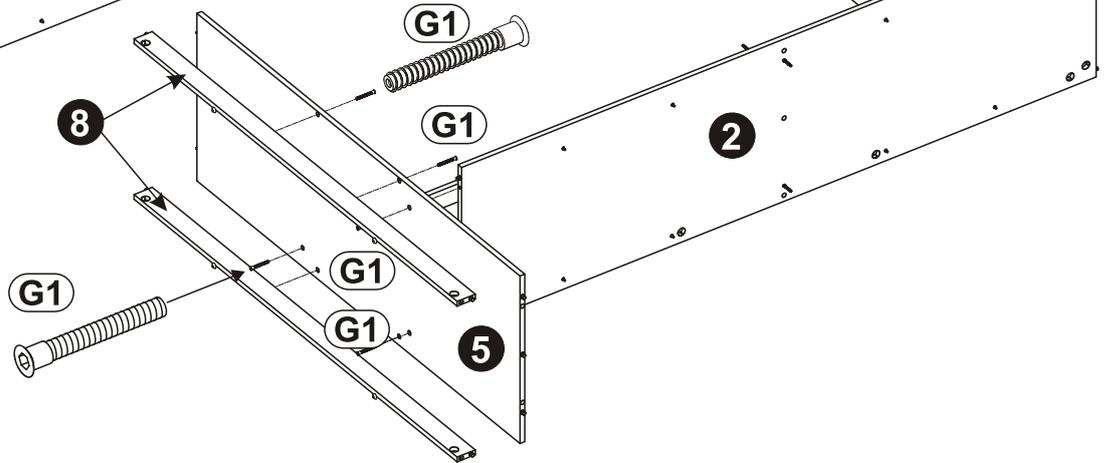


4.3

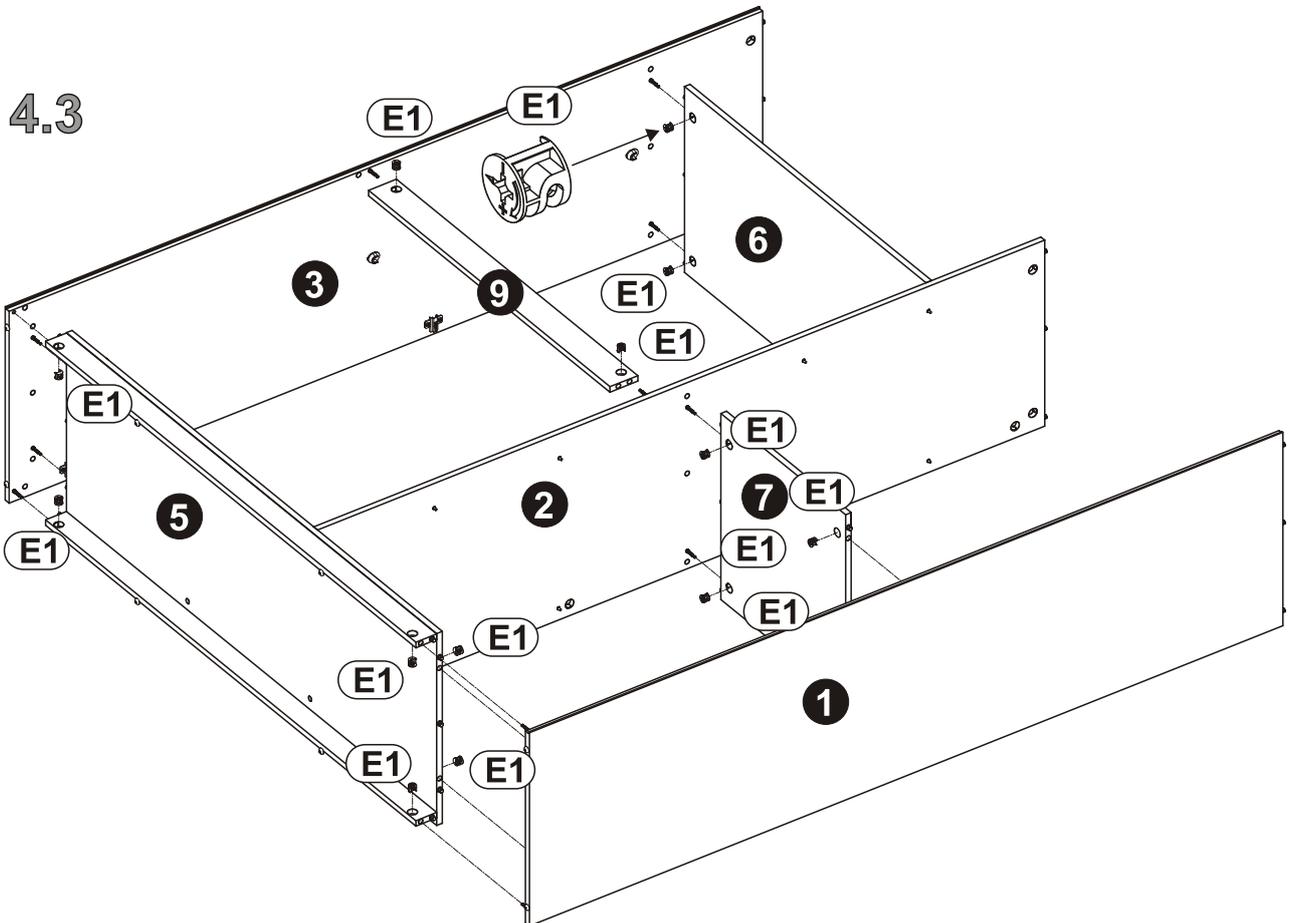


5 ▶

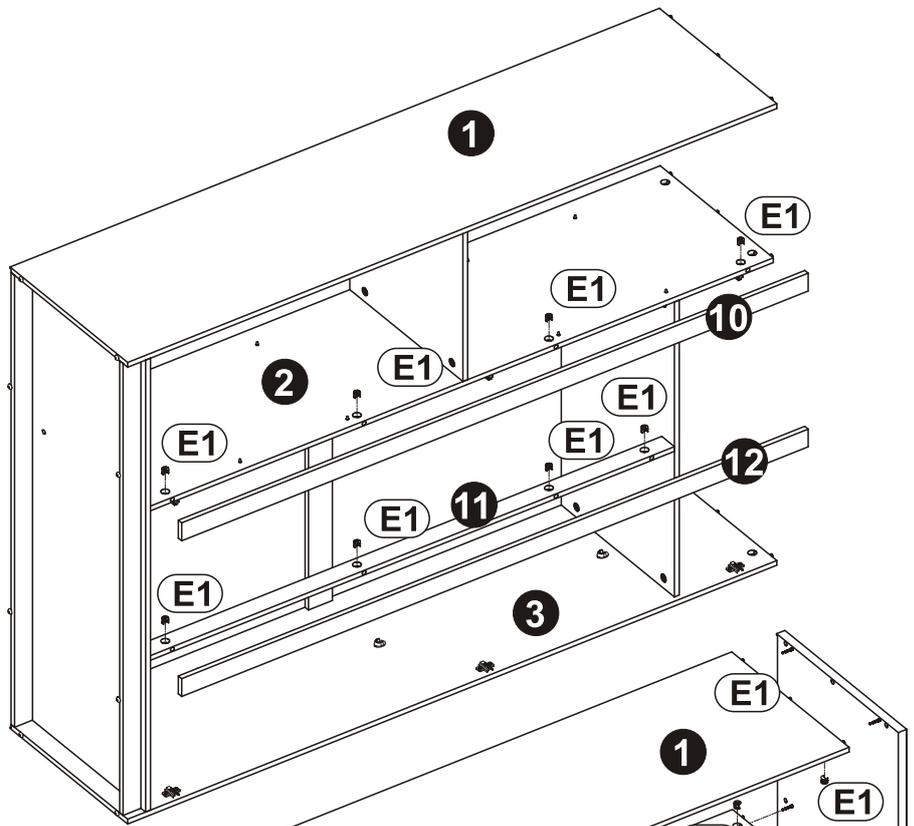





6 ▶

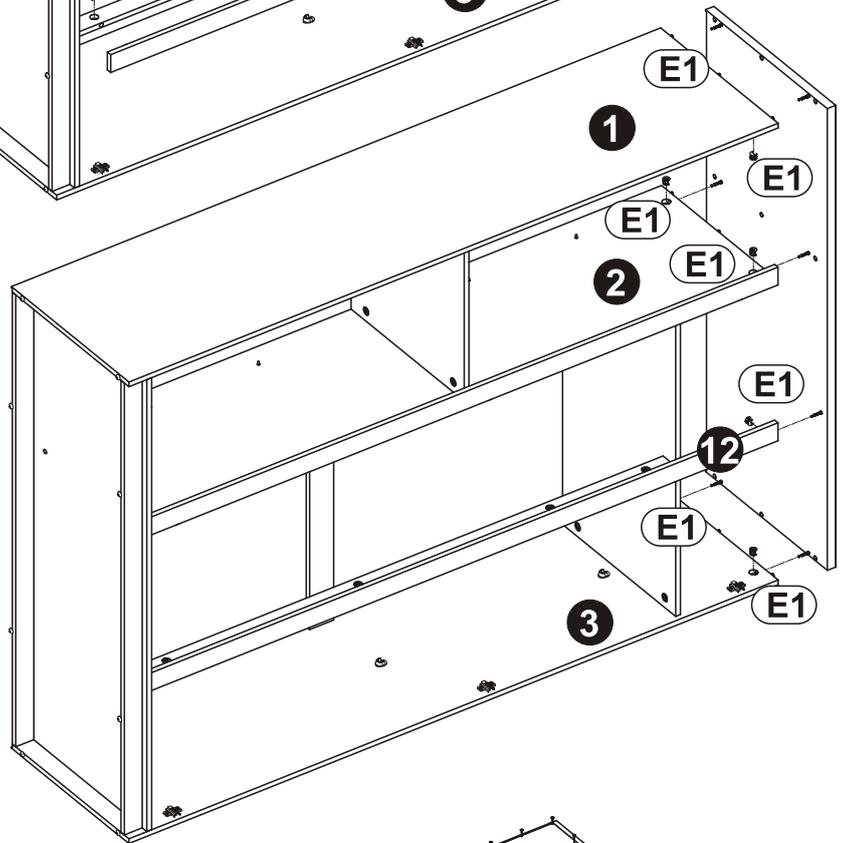

7 ▶

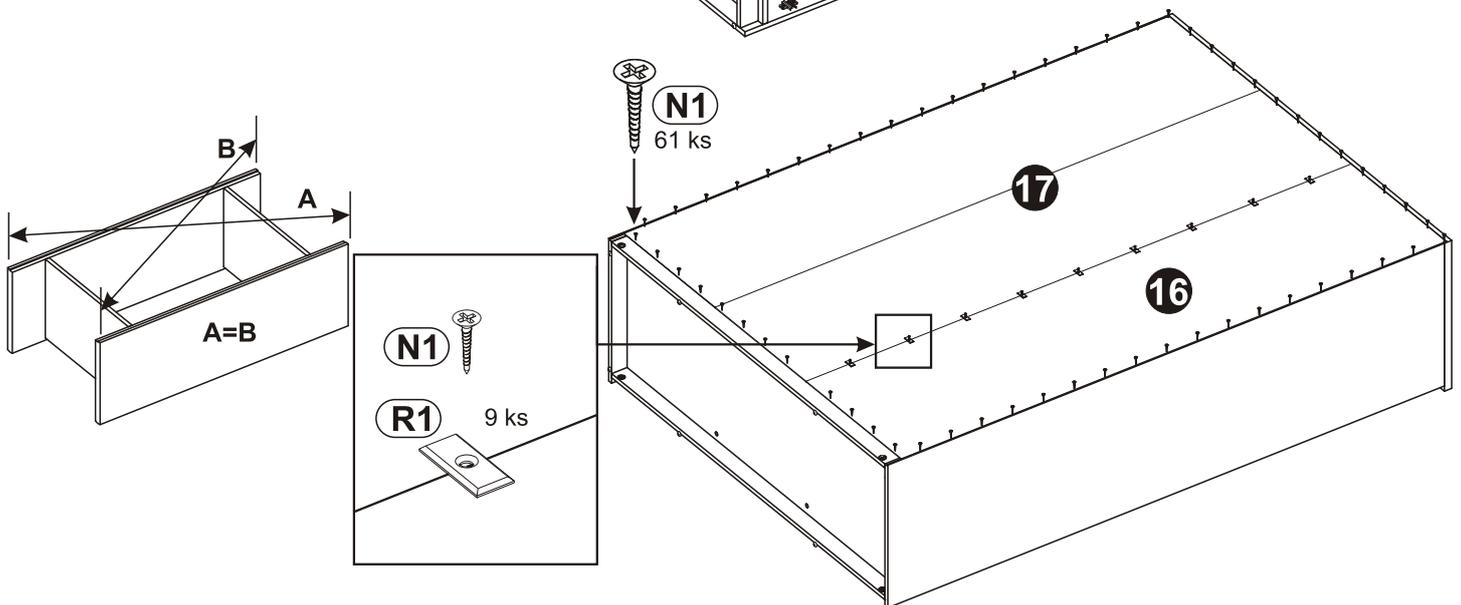

8 ▶

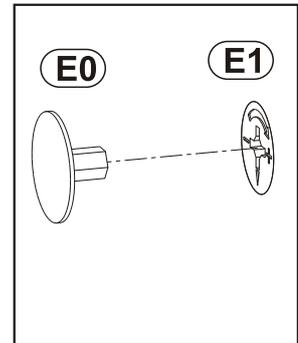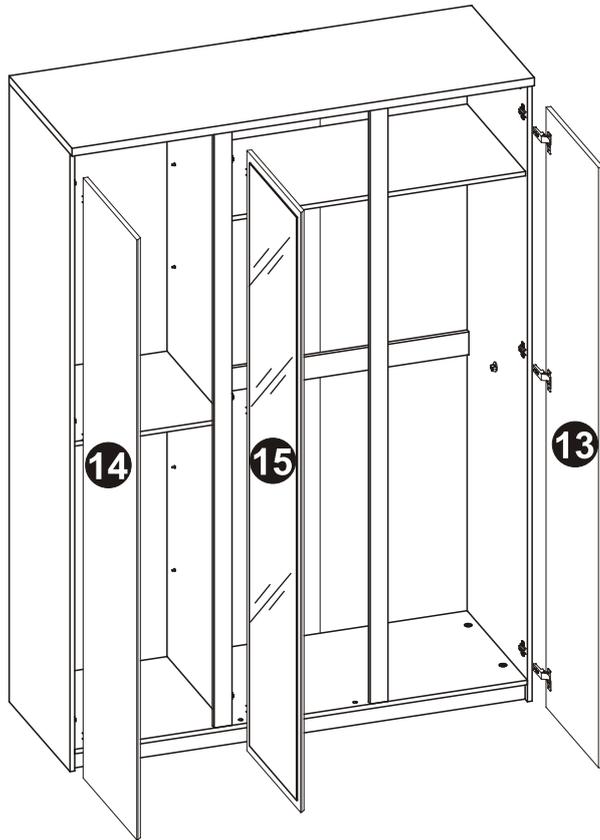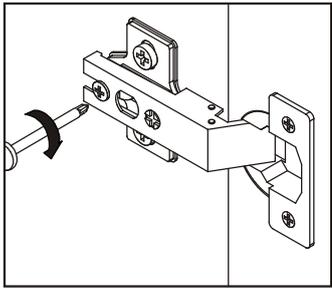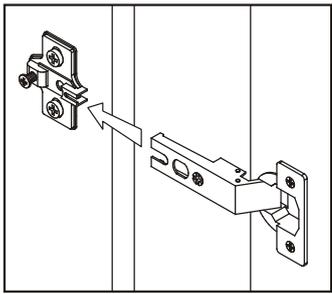

9 ▶

